




L3CAM USER MANUAL

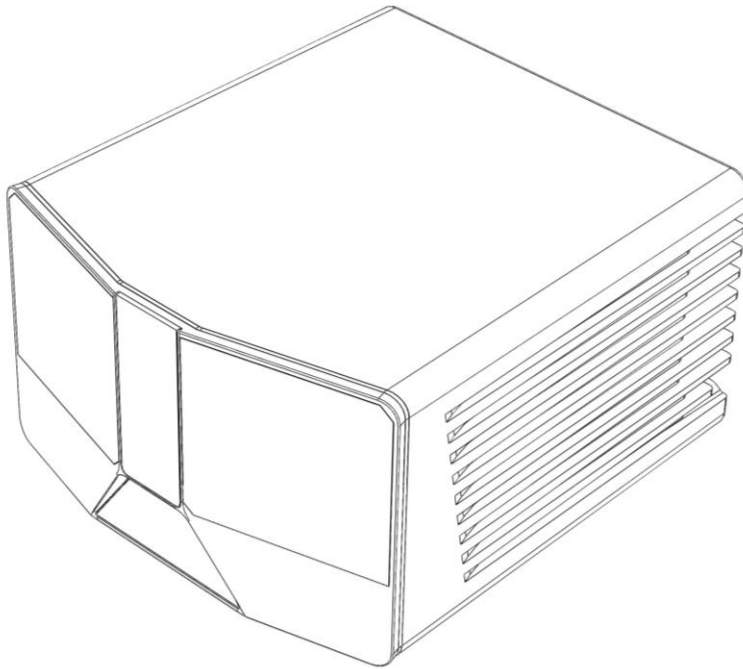

PRODUCT MODEL	L3CAM
RELEASE	1.5

Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	2/124
Author/s:	Eduardo Bernal, Pablo García, Ana Rodríguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

Disclaimer of Liability

The information disclosed to you hereunder (the “Materials”) is provided solely for the selection and use of Beamagine products. To the maximum extent permitted by applicable law: (1) Materials are made available “AS IS” and with all faults, Beamagine hereby DISCLAIMS ALL WARRANTIES AND CONDITIONS, EXPRESS, IMPLIED, OR STATUTORY, INCLUDING BUT NOT LIMITED TO WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT, OR FITNESS FOR ANY PARTICULAR PURPOSE; and (2) Beamagine shall not be liable (whether in contract or tort, including negligence, or under any other theory of liability) for any loss or damage of any kind or nature related to, arising under, or in connection with, the Materials (including your use of the Materials), including for any direct, indirect, special, incidental, or consequential loss or damage (including loss of data, profits, goodwill, or any type of loss or damage suffered as a result of any action brought by a third party) even if such damage or loss was reasonably foreseeable or Beamagine had been advised of the possibility of the same. Beamagine assumes no obligation to correct any errors contained in the Materials or to notify you of updates to the Materials or to product specifications. You may not reproduce, modify, distribute, or publicly display the Materials without prior written consent. The products are subject to the terms and conditions of Beamagine’s limited warranty.

Beamagine products are not designed to provide safety functions nor to be integrated as a part of a safety system. You assume sole risk and liability for use of Beamagine products in such critical applications.

Limited Warranty

Beamagine warrants the L3CAM sensor to be free of defects in materials and workmanship for 12 months from the date of shipment. The user should not attempt to service the L3CAM sensor product beyond the description in this manual. Any attempt by the user to repair any Beamagine product under warranty will void the warranty. If the sensor fails during the warranty period, return the laser freight prepaid to Beamagine with a failure description made by the user. Beamagine will, at its option, repair or replace the defective item and return it freight prepaid to the user. Beamagine also offers repair services for products beyond the warranty. The damaged product is then investigated and evaluated at Beamagine resulting in a repair service report and quotation for the customer to consider. When you return products to Beamagine, please ask for the RMA (Return Material Authorization) number. Beamagine does not accept any returns without an RMA number, and/or if the products are mechanically damaged, scratched, burned or insufficiently and inappropriately packaged and especially if opened by unauthorized persons.



Beamagine S.L.
info@beamagine.com
<https://beamagine.com/>



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	3/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

REVISION HISTORY

Date	Version	Revision
13/04/2022	1.0	Initial Release
13/06/2022	1.1	Protocol for UDP modified, the timestamp is now uint32_t. Added label for detections structure. Added UDP/RTSP port description for RGB and LWIR sensors.
18/07/2022	1.2	Protocol for RTSP updated to H264. Library functions list updated for RGB and thermal images. Thermal and RGB images added in RTSP samples. Structure definitions and error definitions updated. Fixed error with point cloud colormap images.
13/09/2022	1.3	Fixed typos in library API examples for RGB camera functions. Updated network configuration function to enable/disable DHCP
22/11/2022	1.4	Updated API examples and added TERMINATE function description.
06/03/2023	1.5	Updated API examples and added Allied Cameras functionalities. Updated streaming protocols and added sender and receiver pipelines for the allied cameras. Updated error code tables. Updated structure definitions.



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	4/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

TABLE OF CONTENTS

ACRONYMS	8
DEFINITIONS	9
REFERENCE DOCUMENTS	10
1 L3CAM DESCRIPTION	11
1.1 OVERVIEW	11
1.2 KEY FEATURES	12
1.2.1 Solid-state LIDAR	12
1.2.2 Imaging modes	13
1.2.3 Data fusion and embedded processing (optional features)	15
2 GETTING STARTED	18
2.1 SAFETY WARNINGS AND CAUTIONS	18
2.2 LIST OF MATERIALS	18
2.3 SYSTEM SETUP	19
2.3.1 System connection	19
2.3.2 Windows host configuration	20
2.3.3 Linux host configuration	23
3 API USER GUIDE	25
3.1 LIBRARY OVERVIEW	25
3.2 UDP PROTOCOL AND DATA DESCRIPTION	26
3.2.1 Point cloud	26
3.2.2 Image	28
3.3 RTSP PROTOCOL AND DATA DESCRIPTION	31
3.3.1 Point cloud	32
3.3.2 Image	32
3.3.3 Image RGB	33
3.3.4 Thermal image	34
3.3.5 Image RGB Allied Wide	34
3.3.6 Image RGB Allied Narrow	35
3.4 API FUNCTIONS LIST	36
3.5 API FUNCTIONS DESCRIPTION	39
APPENDIXES	110
APPENDIX 1 READING A POINT CLOUD	110



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	5/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

APPENDIX 2	READING AN IMAGE	111
APPENDIX 3	POLARIMETRIC PIXEL FORMAT	113
APPENDIX 4	RETURN CODES	114
APPENDIX 5	STATUS.....	117
APPENDIX 6	DATA STRUCTURES	118
APPENDIX 7	L3CAM DIMENSIONS	123



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	6/124
Author/s:	Eduardo Bernal, Pablo García, Ana Rodríguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

LIST OF TABLES

Table 1. Acronyms.....	8
Table 2. Definitions	9
Table 3. Reference documents	10
Table 4. L3CAM sensors configuration	18
Table 5. libL3Cam ports.	26
Table 6. Point cloud frame header.	27
Table 7. Data packet structure.	27
Table 8. Point structure.	27
Table 9. Point cloud frame footer.	28
Table 10. Image frame header.	29
Table 11. Perception packet.....	30
Table 12. Point cloud frame footer.	30
Table 13. GStreamer pipeline.	31
Table 14. API functions.	36
Table 15. Device temperatures pointer content	60
Table 16. Library return codes.	114
Table 17. Econ RGB camera errors	114
Table 18. Polarimetric camera errors.	115
Table 19. Thermal camera errors.....	115
Table 20. Allied Cameras errors.....	115
Table 21. Status bits.....	117
Table 22. sensorTypes enum fields.	118
Table 23. pointCloudColor enum fields.	119
Table 24. streamingProtocols enum fields.	120
Table 25. sensor struct fields.....	120
Table 26. l3cam struct fields.....	121
Table 27. econResolutions enum fields.	121



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	7/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

LIST OF FIGURES

Figure 1. Components and functions of L3CAM.	11
Figure 2. General scheme of the pulsed solid-state MEMS-based L3CAM LIDAR.	12
Figure 3. MEMS raster scan and its associated FOV.	12
Figure 4. Multiple back-reflected hits example whilst scanning a bulky object.	13
Figure 5. Bayer filter mounted on an imaging sensor.	14
Figure 6. Polarimetric imaging examples.	14
Figure 7. Scheme of the microscopic filter structure of the Sony polarsens sensors.	15
Figure 8. Examples of outdoor LWIR thermal images.	15
Figure 9. Multimodal fusion between the L3CAM LIDAR and different imaging modes.	16
Figure 10. Enhanced AI pedestrian perception of an outdoor scene thanks to data fusion.	17
Figure 11. System connection.	19
Figure 12. L3CAM side view.	19
Figure 13. Windows network connections.	20
Figure 14. Access network properties in Windows.	20
Figure 15. Access TCP/IPV4 settings in Windows.	20
Figure 16. Windows TCP/IPV4 settings.	21
Figure 17. Access advanced Eth properties in Windows.	21
Figure 18. Modify jumbo packet size in Windows.	22
Figure 19. Change receive buffers settings in Windows.	22
Figure 20. Access to network configuration in Ubuntu.	23
Figure 21. Configure IP address in Ubuntu.	23
Figure 22. Set jumbo packet size in Ubuntu.	24
Figure 23. Activate the network interface.	24
Figure 24. Configuration of the receiving buffers size.	24
Figure 25. Categories of the functions of the libL3Cam API.	25
Figure 26. L3CAM initialization sequence.	25
Figure 27. Operation sequence.	25
Figure 28. Transmission sequence of point cloud data.	26
Figure 29. Point cloud reference coordinate system.	28
Figure 30. Colour scale for distance (a) and intensity (b).	28
Figure 31. Transmission sequence of image data with results from perception functions.	29
Figure 32. Point cloud and cropping area.	32
Figure 33. Polarimetric Bayer image. See image format in APPENDIX 3.	33
Figure 34. RGB image from econ camera.	33
Figure 35. Thermal image using TYRIAN colormap	34
Figure 36. Allied 1800 U-508c with KOW-LM6JC	35
Figure 37. Allied 1800 U-319c with M2514-MP2.	36
Figure 38. Colour filter array of Lucid PHX050S1.	113
Figure 39. L3CAM front side dimensions.	123
Figure 40. L3CAM mount holes dimensions.	124



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	8/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

ACRONYMS

Table 1. Acronyms

ACRONYM	DESCRIPTION
AC/DC	Alternating Current / Direct Current
AI	Artificial Intelligence
API	Application Programming Interface
CCD	Charge-Coupled Device
CMOS	Complementary Metal-Oxide Semiconductor
DMD	Digital Micromirror Device
DOLP	Degree Of Linear Polarization
FOV	Field Of View
IP	Internet Protocol
IPv4	Internet Protocol Version 4
IR	InfraRed
LIDAR	Light Detection And Ranging
LWIR	Long-Wave Infrared
MEMS	Micro Electro Mechanical System / Sensor
MTU	Maximum Transmission Unit
NIC	Network Interface Card
NIR	Near InfraRed
RGB	Red-Green-Blue
RTSP	Real Time Streaming Protocol
SNR	Signal-to-Noise Ratio
SW	SoftWare
TCP	Transmission Control Protocol
TOF	Time Of Flight
TOT	Time Over Threshold
UDP	User Datagram Protocol
VIS	VISible



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	9/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

DEFINITIONS

Table 2. Definitions

TERM	DESCRIPTION
Data fusion	Data fusion is the process of integrating multiple data sources to produce more consistent, accurate, and useful information than that provided by any individual data source.
DOLP	Measure of the amount of linearly polarized light. The larger the DOLP, the clearer the linear polarization state.
Hit	A hit is a point at which the laser beam pulse reaches an object that reflects it to the LIDAR.
Perception	Machine perception is the capability of a system to interpret data similarly to humans.
TOF	Elapsed time between light events. In the case of L3CAM, TOF is the elapsed time a pulse travels from the laser source, backscatters on a target and comes back to the detector. Thus, it is a direct measure of the distance to the target.
TOT	The elapsed time that the voltage signal caused by an incoming pulse on the photodetector is above a threshold level. Thus, it is a measure of the total energy received since the larger the TOT, the higher the intensity.



Version:	1.5	 L3CAM User manual	Page:	10/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

REFERENCE DOCUMENTS

Table 3. Reference documents

	DOCUMENT	TITLE	VERSION	DATE
RD 1	L3CAM datasheet	L3CAM Multimode imaging LIDAR datasheet	1.0	06/04/2022
RD 2	GenlCam standards	European machine vision association web page.	NA	



Beamagine S.L.
info@beamagine.com
<https://beamagine.com/>



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	11/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

1 L3CAM DESCRIPTION

1.1 OVERVIEW

The L3CAM is a multimodal sensor composed essentially of a solid-state LIDAR sensor and up to 3 additional imaging modes (RGB, thermal and/or polarimetric).

The LIDAR system is a patented MEMS-based scanning technology that combines high-resolution 3D imaging, real-time frame rate, and long-range. The most suitable combination for applications related to autonomous vehicles, security, object detection, situational awareness and mapping.

Critical applications, however, require more than a single “eye” to achieve high-reliability levels once the data is processed. This is where the additional imaging modes play a significant role.

The data from the different sensors can be integrated through data fusion algorithms to provide more consistent, accurate and useful information about the environment.

On top of the processing chain, at the higher abstraction level, L3CAM integrates state-of-the-art perception algorithms to perform objects recognition.

L3CAM offers the all in a single, compact and cost-effective device.

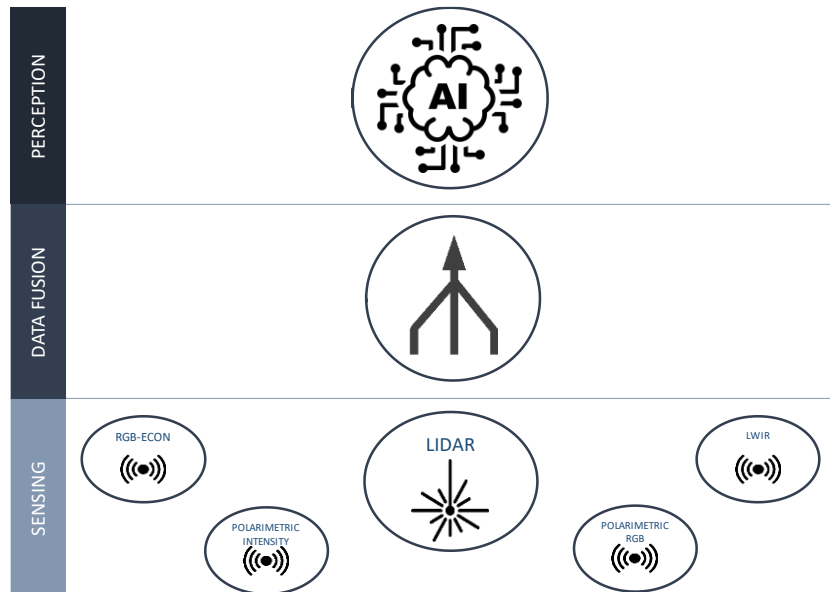


Figure 1. Components and functions of L3CAM.



Version:	1.5	 L3CAM User manual	Page:	12/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

1.2 KEY FEATURES

1.2.1 Solid-state LIDAR

The L3CAM LIDAR sensor is a solid-state device without mechanical moving parts for scanning the environment or large embodiments. Its optomechanical design is based on a MEMS scanner which steers a pulsed IR fibre laser beam towards targets within the FOV of the system and a receptor that gathers the backscattered light to resolve the distance to them from its TOF – time the pulse is travelling from the LIDAR source to the object and backscatters to the detector. This subdivision of the sensor can be appreciated in the following figure.

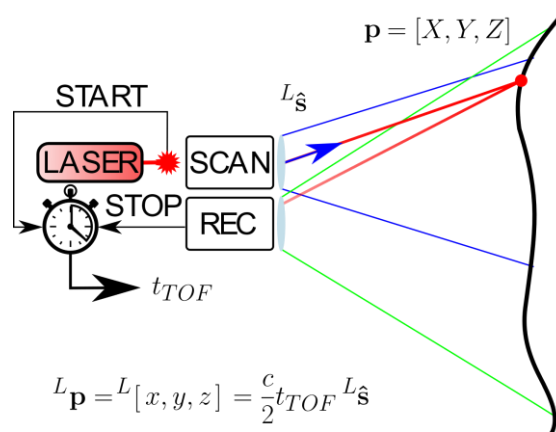


Figure 2. General scheme of the pulsed solid-state MEMS-based L3CAM LIDAR.

Using a MEMS scanner enables reaching high output frame rates (~10 Hz) as well as high-resolution Point Clouds with a large point density. The L3CAM LIDAR offers a rectangular FOV, similar to conventional cameras, by using a raster scan that provides great precision, accuracy and angular resolution in both horizontal and vertical scanning directions (<0.1°). The FOV is cropped to avoid non-linearities in the changes of lines.

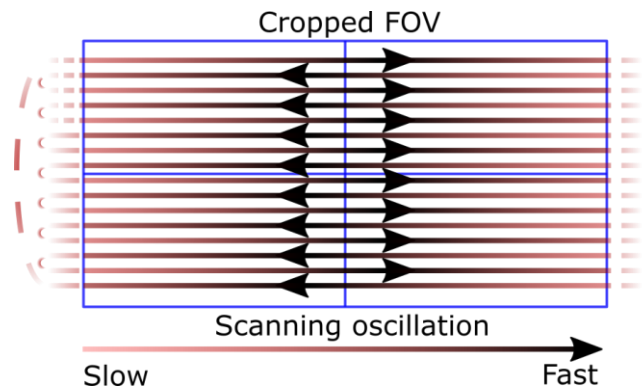


Figure 3. MEMS raster scan and its associated FOV.

Together with the solid-state design, the L3CAM LIDAR sensor offers a patented solar background suppression that enhances its detectivity, thus enlarging its measurement range, by improving the SNR.



Beamagine S.L.
info@beamagine.com
<https://beamagine.com/>



Version:	1.5	 L3CAM User manual	Page:	13/124
Author/s:	Eduardo Bernal, Pablo García, Ana Rodríguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

It does not only become L3CAM LIDAR robust to sunlight but also self-immune to other devices situated simultaneously together in the same environment. Hence, it is possible to use an array of L3CAM devices for covering a wider FOV without the risk of cross-talking in the union.

Moreover, the L3CAM LIDAR sensor is capable of gathering up to 4 different back-reflected pulses in a single scanning direction because the laser beam slightly broadens as long as it propagates through space due to its divergence ($\sim 0.1^\circ$). Consequently, a portion of the total emitted energy might back-reflect from either a tiny object or at the contour of a bulky one whereas the remaining one might keep travelling towards further targets producing multiple reflections with different back-reflected intensities measured with the TOT of the measured peak, as Figure 4 demonstrates below.

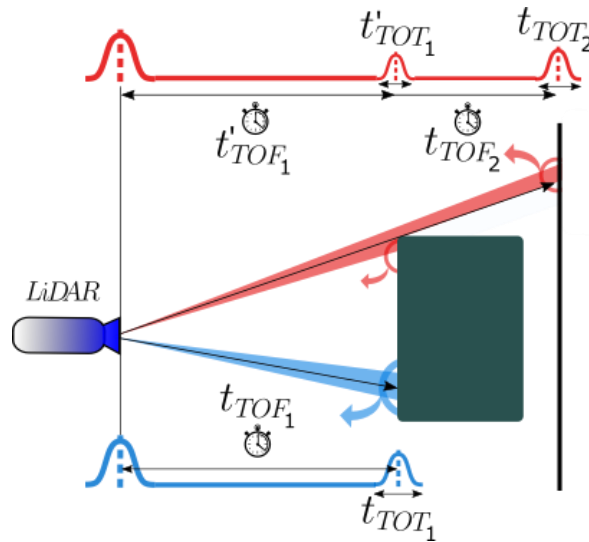


Figure 4. Multiple back-reflected hits example whilst scanning a bulky object.

To summarize, the L3CAM LIDAR sensor offers a high-end imaging performance thanks to the high resolution provided by the MEMS scanner and the enhanced range detectivity by the patented background suppression, resulting in dense output Point Clouds with up to 4 hits.

1.2.2 Imaging modes

Apart from the LIDAR sensor, the L3CAM device provides additional imaging modes that are complementary between them. In such a way, the L3CAM device offers information from different natures and working principles which are referred to as imaging modes. Obtaining information from different imaging modes and sensors is crucial for improving the overall performance and reliability of L3CAM.

Up to date, L3CAM versions can be mounted with up to 3 complementary passive imaging modes:

1.2.2.1 RGB or colour

The conventional colour camera senses the colour information of the environment using a CCD or a CMOS sensor with a Bayer filter (Figure 5). This imaging mode senses the amount of light, thus intensity, in the VIS domain (400 – 700 nm) of the spectrum.

Version:	1.5	 BEAM\ENGINE L3CAM User manual	Page:	14/124
Author/s:	Eduardo Bernal, Pablo García, Ana Rodríguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

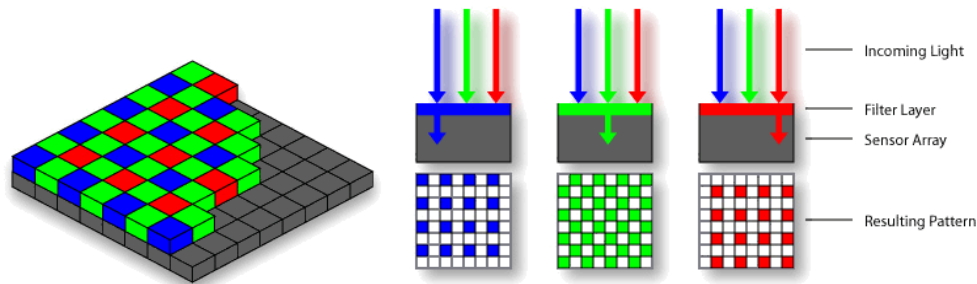


Figure 5. Bayer filter mounted on an imaging sensor.
Image from <https://commons.wikimedia.org/wiki/File:BayerPatternFiltration.png>

The high-resolution colour images provided by this imaging mode mimic human eye perception, hence the importance of this mode for AI perception and assisted computer visual applications.

1.2.2.2 Polarimetric mono

Polarization is the vectorial property of light related to the geometrical orientation of the transverse wave's oscillations, which is perpendicular to its direction of motion. Light can be unpolarized (radiation from many light sources like the sun) or either linearly, circularly or elliptically polarized. Polarizers are materials that let a certain polarization state pass through, thus they act as filters. Hence, polarimetric cameras sense the polarization state of light using combinations of orthogonal polarizers. In particular, the L3CAM's polarimetric mono camera uses an array of micro-polarizers set as a Bayer filter for sensing four different polarization states in the VIS and slightly in the NIR (>780 nm) domain at once, as Figure 6 presents.

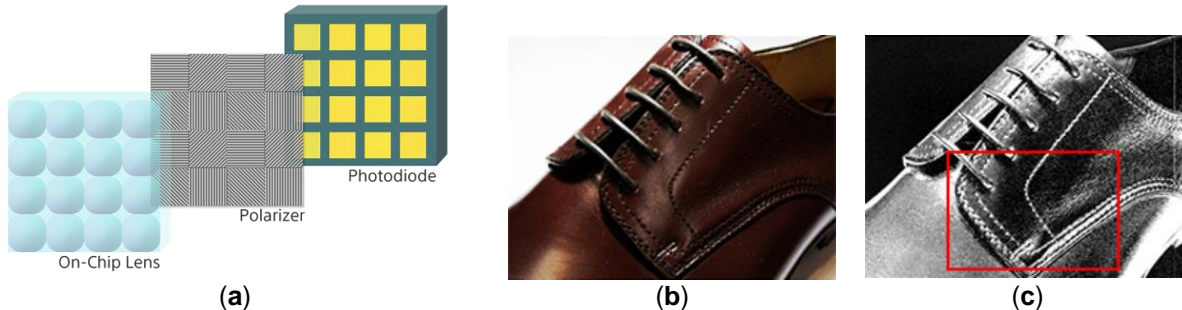


Figure 6. Polarimetric imaging examples.
(a) Microscopic structure of the Sony IMX264MZR polarsens sensor. (b) Conventional colour image.
(c) Polarimetric image representing the Degree Of Linear Polarization (DOLP) that enhances contrast.
Images from <https://www.sony-semicon.co.jp/e/products/IS/industry/technology/polarization.html>.

Polarization is imperceptible for human vision but many animals are sensitive to this light's property because it helps to distinguish between materials. Usually, metals and some artificial materials that keep polarization or polarize in a certain state, clearly differentiate from natural objects that depolarize light. Thus, this imaging mode provides additional contrast of the environment in high resolution as well.

1.2.2.3 Polarimetric colour

Whereas the previous imaging mode senses the total amount of light with a certain polarization state in the whole VIS domain, polarimetric colour cameras are capable of also splitting such information in colours. They combine the micro-polarizers array with a Bayer filter for obtaining the polarization state at the three-primary colour RGB wavelengths as Figure 7 depicts below.



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	15/124
Author/s:	Eduardo Bernal, Pablo García, Ana Rodríguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

90	45	90	45
135	0	135	0
90	45	90	45
135	0	135	0

(a)

90	45	90	45	90	45	90	45
Gb	B	Gb	B	Gb	B	Gb	B
135	0	135	0	135	0	135	0
90	45	90	45	90	45	90	45
R	Gr	R	Gr	R	Gr	R	Gr
135	0	135	0	135	0	135	0
90	45	90	45	90	45	90	45
Gb	B	Gb	B	Gb	B	Gb	B
135	0	135	0	135	0	135	0
90	45	90	45	90	45	90	45
R	Gr	R	Gr	R	Gr	R	Gr
135	0	135	0	135	0	135	0

(b)

Figure 7. Scheme of the microscopic filter structure of the Sony polarsens sensors.
(a) Polarimetric mono IMX264MZR. (b) Polarimetric colour IMX264MYR.

In line with the above imaging mode, this one not only provides polarization information to the overall perception but also colour information at once from a unique sensor.

1.2.2.4 LWIR or thermal

Contrary to all the previous imaging modes that work in the VIS and NIR domain, LWIR imaging mode is sensitive to the long-wave IR wavelengths (7 – 14 μm). Consequently, this imaging mode provides thermal information about the environment. Temperature, besides being complementary, offers robustness to lighting conditions and to challenging environments like fog, smoke, rain and dust for example. Firstly, temperature variations in the LWIR range are extremely slow compared to varying illumination conditions and it does not require external illumination since objects always radiate in the LWIR domain. Secondly, scattering media responsible for reducing visibility interacts differently with the LWIR wavelengths than with the VIS and NIR ones due to particle size.



Figure 8. Examples of outdoor LWIR thermal images.

Hence, this imaging mode is robust to external conditions, it does not even need external illumination, and to hazardous conditions where VIS and NIR sensors might fail to work properly.


1.2.3 Data fusion and embedded processing (optional features)

The L3CAM device optionally offers data from all its available sensors precisely and accurately fused, what is called congruent data fusion, according to the acquired product version. This is thanks to an industry-leading multisensory intrinsic calibration and the mechanical robustness and embeddedness of



Version:	1.5	 BEAM\A\GINE L3CAM User manual	Page:	16/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

the device. This novel multimodal calibration process yields low parallax error that outperforms the state-of-the-art data fusion devices for all the available imaging modes.

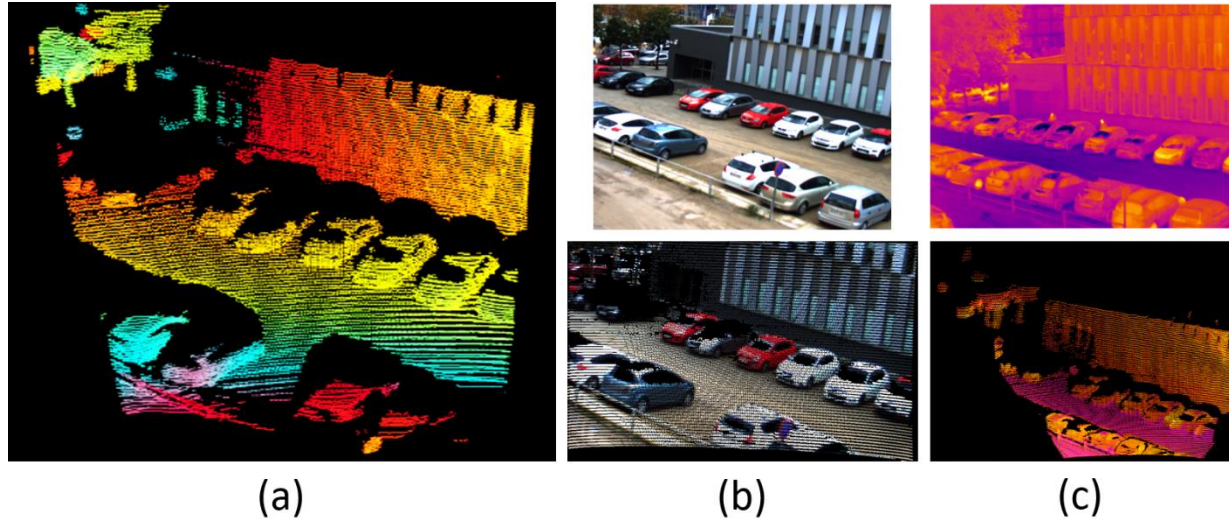

*Figure 9. Multimodal fusion between the L3CAM LIDAR and different imaging modes.
(a) Original Point Cloud coloured with distance. (b) Colour and (c) Thermal image with the corresponding fused Point Cloud.*

Thanks to its powerful embedded processing unit, the L3CAM device is capable of offering this congruent data fusion in real-time although it can also be computed offline. This unit synchronously gathers data from all sensors with 10 ns high-resolution timestamps and short time discrepancy. Moreover, depending on the product version, the L3CAM software incorporates advanced and accelerated AI perception algorithms for real-time object detection and tracking that benefit from the congruent data fusion for improving its overall performance and reducing the rate of false alarms.

Version:	1.5	 L3CAM User manual	Page:	17/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

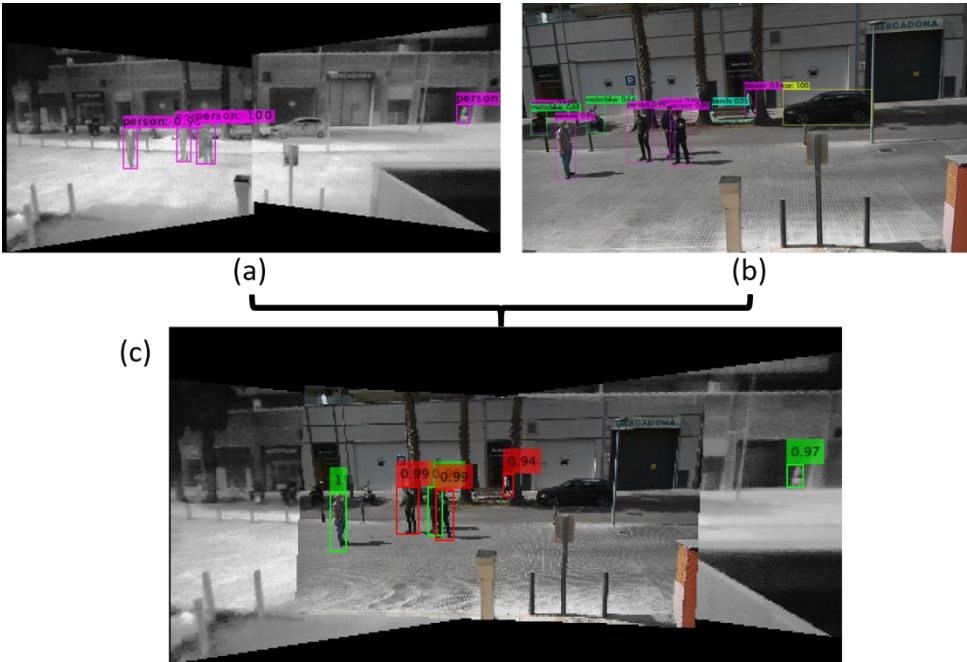


Figure 10. Enhanced AI pedestrian perception of an outdoor scene thanks to data fusion.
(a) Perception on a panoramic thermal image. (b) Perception on a colour image. (c) Perception on a colour + thermal image where the colour of the bounding boxes determines which sensor provides greater detection confidence: (green) thermal detections and (red) colour detections.



Version:	1.5	 L3CAM User manual	Page:	18/124
Author/s:	Eduardo Bernal, Pablo García, Ana Rodríguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

2 GETTING STARTED

2.1 SAFETY WARNINGS AND CAUTIONS

The L3CAM product fulfills the class 1 classification according to the requirements of IEC 60825-1: 2014 / 2007 (Safety of Laser Products).



WARNING:

"DANGER - Laser Radiation - Do Not Stare Into Beam or View Directly With Optical Instruments, for example, eye loupes, magnifiers, microscopes or binoculars".

The light source from this sensor emits invisible laser radiation. Avoid direct exposure to the laser light source.

2.2 LIST OF MATERIALS

The following items are delivered with the purchase of L3CAM:

- L3CAM multimodal sensor.
- Connection cable.
- AC/DC converter.
- SW integration library.
- User guide.

The current configuration of the L3CAM includes the sensors specified in the following table.

Table 4. L3CAM sensors configuration

Sensor Type	Manufacturer	Model	Field of View
LiDAR	Beamagine	N/A	60x20
RGB Camera	Allied Vision	1800 U-508c	Wide, 69x60
	Allied Vision	1800 U-319c	Narrow, 16x12
LWIR Camera	Seek Thermal	C304S	56x42



Beamagine S.L.
info@beamagine.com
<https://beamagine.com/>



Version:	1.5	 BEAM\A\GINE L3CAM User manual	Page:	19/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

2.3 SYSTEM SETUP

Hereinafter we describe the steps required to set up L3CAM, connect it to the system host and configure the network.

2.3.1 System connection

The L3CAM cable to connect the multimodal sensor to the host has a custom connector on the L3CAM side and an RJ45 connector and a power connector on the host side.

The connection of the system is described in the following figures.

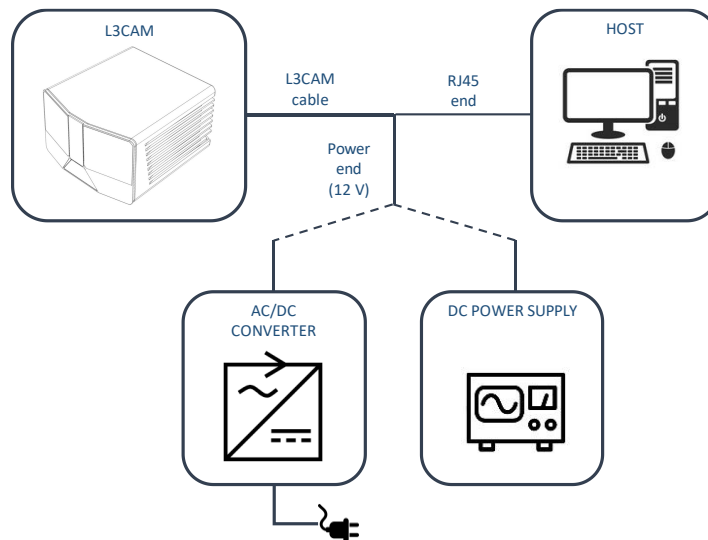


Figure 11. System connection.

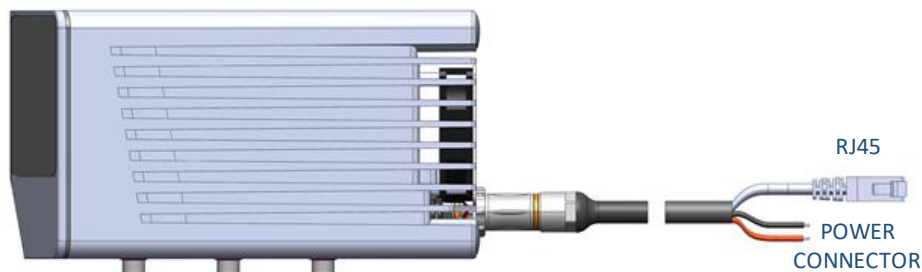


Figure 12. L3CAM side view.



Version:	1.5	 BEAM\A\GINE L3CAM User manual	Page:	20/124
Author/s:	Eduardo Bernal, Pablo García, Ana Rodríguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

2.3.2 Windows host configuration

To configure the IP address of the device, go to control panel > Network and internet > Network connections:

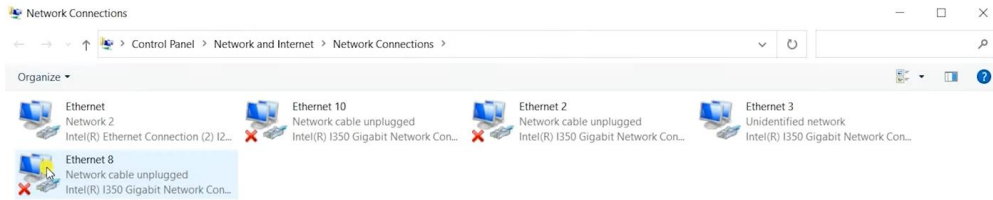


Figure 13. Windows network connections.

Select the NIC where the L3CAM is connected, right-click and open the properties window:

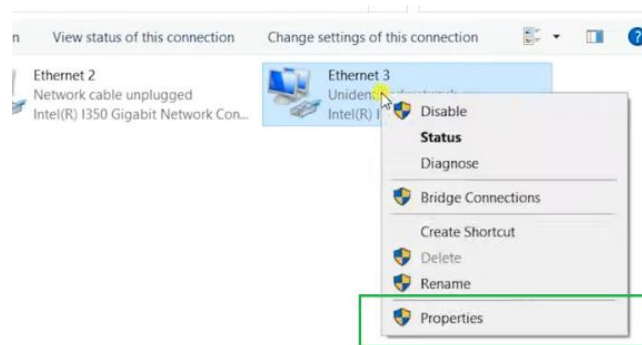


Figure 14. Access network properties in Windows.

Then go to TCP/IPV4 settings:

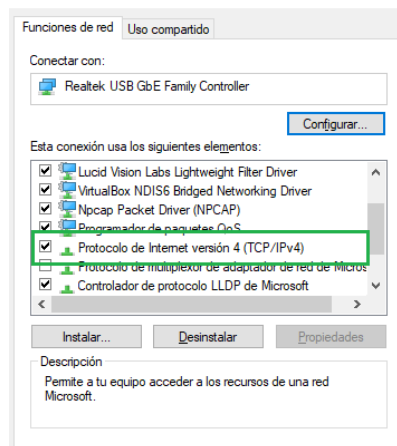


Figure 15. Access TCP/IPV4 settings in Windows.

Select the manual configuration and type the desired address, the netmask and the gateway (optional).

Version:	1.5	 L3CAM User manual	Page:	21/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

The host IP address has to be in the range 192.168.5.XXX because the L3CAM is configured with netmask size 24. In this example, the configured IP address is 192.168.5.21 and netmask 255.255.255.0. The gateway is left empty.

Click accept to save the changes, this will automatically close the window.

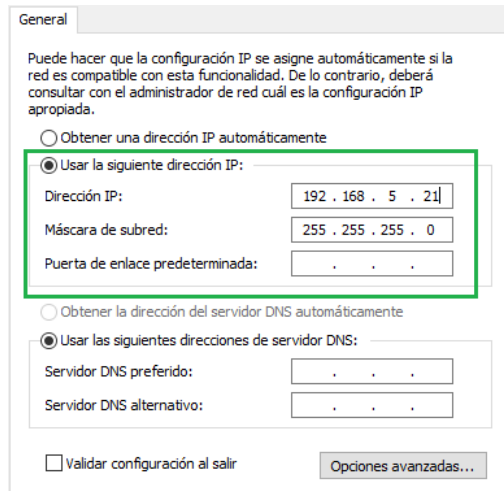


Figure 16. Windows TCP/IPV4 settings.

To enable jumbo frames on the NIC, click on the configure button of the Ethernet interface properties to open the advanced settings.

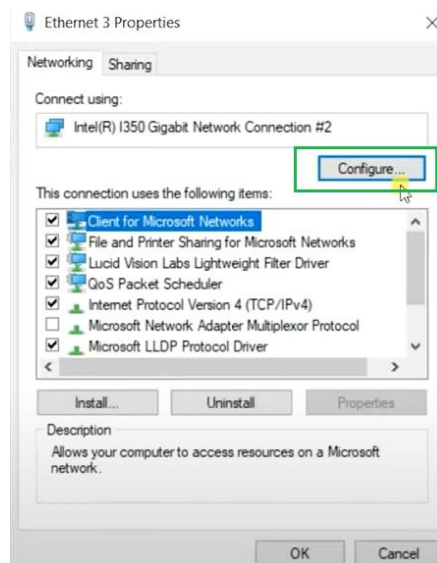


Figure 17. Access advanced Eth properties in Windows.

Then go to the advanced tab, and search the jumbo packet option; modify the value to 9014 bytes:



Version:	1.5	 L3CAM User manual	Page:	22/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

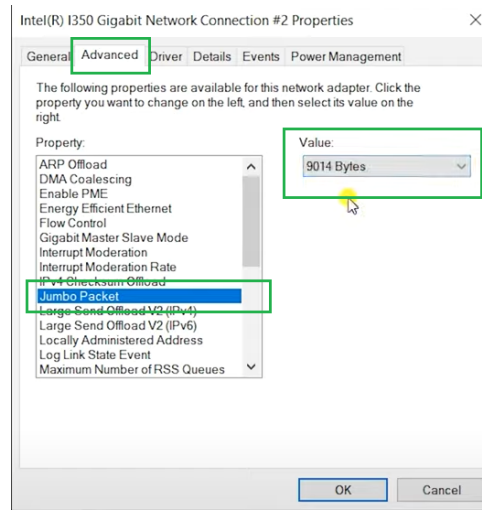


Figure 18. Modify jumbo packet size in Windows.

Finally, in the same window, search the receive buffers property and change the value to 2048:

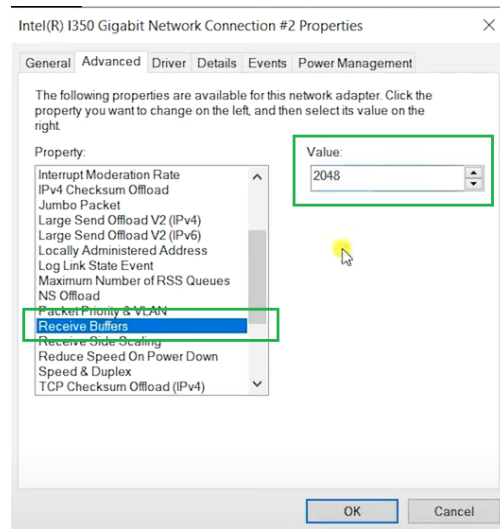


Figure 19. Change receive buffers settings in Windows.

When all the above steps are done, the host will be ready to receive the data streams of the L3CAM.

Version:	1.5	 L3CAM User manual	Page:	23/124
Author/s:	Eduardo Bernal, Pablo García, Ana Rodríguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

2.3.3 Linux host configuration

To configure the Ethernet IP address of the host device, go to system configuration > network. From the list select the NIC to be configured and click on Options... this will open the NIC options window.

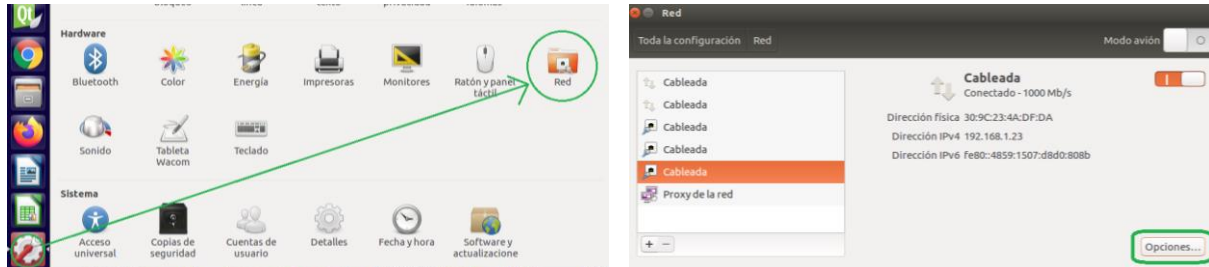


Figure 20. Access to network configuration in Ubuntu.

In the NIC options window go to IPv4 settings, in Method select Manual, then click on the button Add and type the desired IP address, mask and gateway (optional), then click on Save.

The host IP address has to be in the range 192.168.5.XXX because the L3CAM is configured with netmask size 24. In this example the configured IP address is 192.168.5.20.

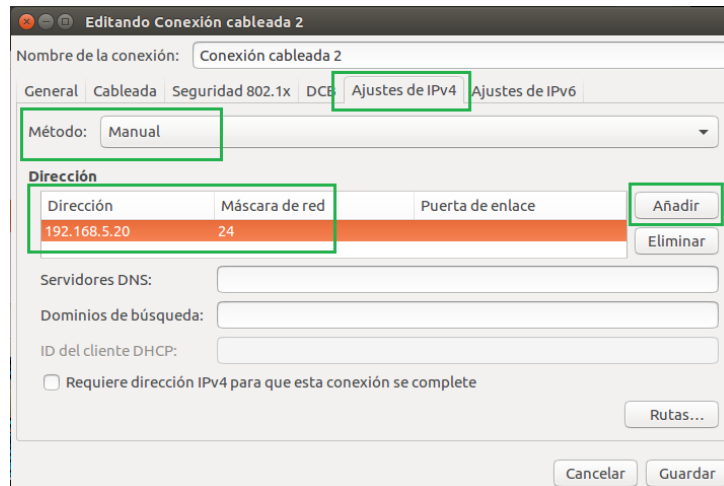


Figure 21. Configure IP address in Ubuntu.

Version:	1.5	 BEAM\ENGINE L3CAM User manual	Page:	24/124
Author/s:	Eduardo Bernal, Pablo García, Ana Rodríguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

In the current window go to the Ethernet tab and change the MTU value to 9000, this will allow the host device to handle jumbo frames.

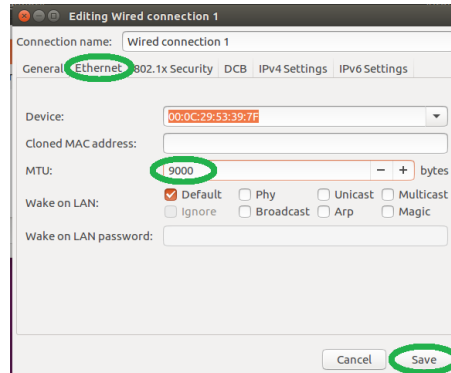


Figure 22. Set jumbo packet size in Ubuntu.

Finally, click the Save button and then restart the NIC configuration with the on/off switch button as shown in the next images.



Figure 23. Activate the network interface.

The last step is to configure the receiving buffers size, to do so open a console with ctrl + alt + t, and type the following commands:

```
sudo sh -c "echo 'net.core.rmem_default=268435456' >> /etc/sysctl.conf"
sudo sh -c "echo 'net.core.rmem_max=268435456' >> /etc/sysctl.conf"
sudo sysctl -p
```

```
beamagine@beamagine-l3cam-dev:~$ sudo sh -c "echo 'net.core.rmem_default=268435456' >> /etc/sysctl.conf"
[sudo] contraseña para beamagine:
beamagine@beamagine-l3cam-dev:~$ sudo sh -c "echo 'net.core.rmem_max=268435456' >> /etc/sysctl.conf"
beamagine@beamagine-l3cam-dev:~$ sudo sysctl -p
net.core.rmem_default = 268435456
net.core.rmem_max = 268435456
beamagine@beamagine-l3cam-dev:~$
```

Figure 24. Configuration of the receiving buffers size.

When all the above steps are done, the host will be ready to receive the data streams of L3CAM.

Version:	1.5	 L3CAM User manual	Page:	25/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

3 API USER GUIDE

3.1 LIBRARY OVERVIEW

The library for the integration of L3CAM in the system host (libL3Cam) has been designed to encapsulate all the complexities of the system, automating many functions to simplify the use of the system. The interface exposed by the API has been carefully designed to facilitate its use.

Before proceeding with the details of the API let's establish the following set of categories of the functions:

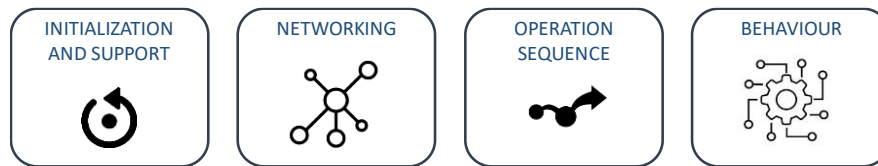


Figure 25. Categories of the functions of the libL3Cam API.

This set of functions is used to initialize and operate L3CAM.

The initialization sequence is described in the following figure.



Figure 26. L3CAM initialization sequence.

The operation sequence is as follows:

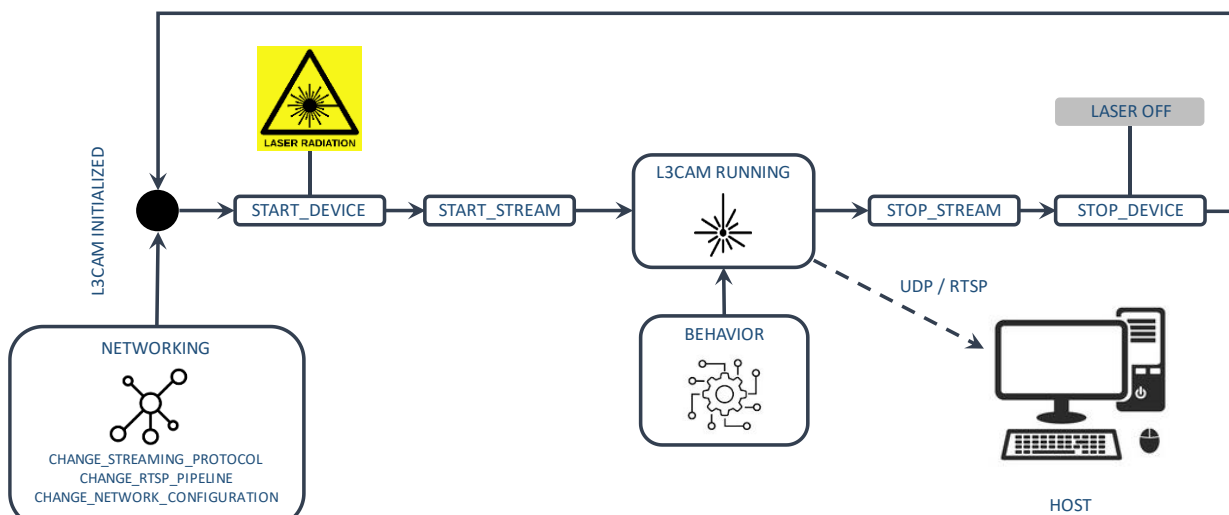


Figure 27. Operation sequence.



Version:	1.5	 BEAM\ENGINE L3CAM User manual	Page:	26/124
Author/s:	Eduardo Bernal, Pablo García, Ana Rodríguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

After starting the device, we ask it to start streaming to have it fully operational and sending UDP/RTSP packets to the host computer as will be described in the section below. In this state, we can use the functions under the behaviour category to change its comporment.

LibL3Cam uses the following ports for communications

Table 5. libL3Cam ports.

PROTOCOL	PORT	CONFIGURATION
TCP	6000	Fixed
UDP	6050 (LIDAR)	Fixed
UDP	6060 (Allied Wide RGB)	Fixed
UDP	6020 (Allied Narrow RGB)	Fixed
UDP	6030 (LWIR)	Fixed
RTSP	5040 (LIDAR)	Reconfigurable
RTSP	5030 (Allied Wide RGB)	Reconfigurable
RTSP	5010 (Allied Narrow RGB)	Reconfigurable
RTSP	5020 (LWIR)	Reconfigurable

TCP is used internally by lib3Cam and is transparent to the user. However, the system host must have the required port available.

3.2 UDP PROTOCOL AND DATA DESCRIPTION

In this mode, L3CAM sends non-compressed LIDAR and multi-modal sensor data with the UDP protocol. Since each sensor uses a different UDP port as described in Table 5, it is recommended to implement a different thread for each sensor to properly receive the data.

To optimize networking resources, it is required to enable jumbo frames as described in section 2.3.

3.2.1 Point cloud

The transmission sequence of a point cloud frame is described in Figure 28.

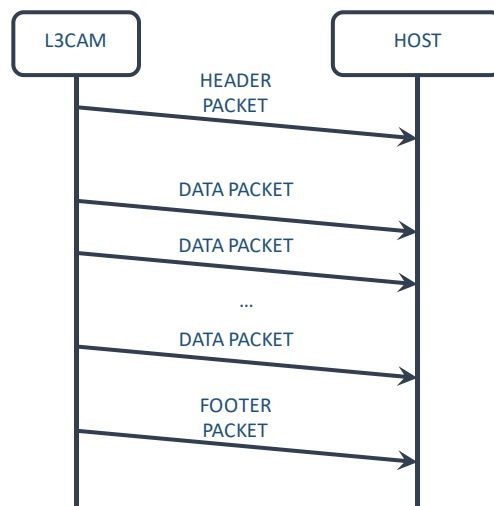


Figure 28. Transmission sequence of point cloud data.



Version:	1.5	 BEAM\A\GINE L3CAM User manual	Page:	27/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

The transmission of the frame starts with a header packet, is followed by a sequence of data packets and is finalized with a footer packet.

The header packet is as follows:

Table 6. Point cloud frame header.

FIELD	STX	Total number of points	Ctrl value 1	Ctrl value 2	Timestamp
SIZE (Bytes)	1	4 (int32_t)	4 (int32_t)	4 (int32_t)	4 (uint32_t)
Value	0x02				

where:

- STX is a header packet identifier with value 0x02.
- Total number of points: the number of points that will be sent in the sequence of data packets.
- ctrl value 1: reserved.
- ctrl value 2: reserved.
- Timestamp: an integer that represents the time when the frame was received. The time is in the L3CAM Jetson TX2 time and contains **hhmmsszzz**. For example, a frame received at 18:32:12:346 will return the timestamp value 183212346;

The data packets are organized as described in the following table:

Table 7. Data packet structure.

FIELD	Number of points in packet	Point 1	Point 2	...	Point N
SIZE (Bytes)	4 (int32_t)	20 (point)	20 (point)	20 (point)	20 (point)

Each data packet contains 400 points (packet size = 8000 + 4 bytes) but the last one, which can contain fewer points depending on the configuration of the LIDAR resolution.

Each point has the following structure:

Table 8. Point structure.

FIELD	X	Y	Z	Intensity	RGB
SIZE (Bytes)	4 (int32_t)	4 (int32_t)	4 (int32_t)	4 (int32_t)	4 (int32_t)

where:

- X, Y, Z are the coordinates of the hit¹ in the coordinate system described in Figure 29;
- Intensity²;
- RGB is a field that can represent different features depending on the configuration:

¹ See description in the definitions section.

² Intensity is the same as the TOT value described in 1.2.



Version:	1.5	 BEAM\ENGINE L3CAM User manual	Page:	28/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

- colour scale³ for the distance of the hit (d),
- colour scale for the intensity of the hit,
- RGB value of the sensor with which the point cloud has been fused.

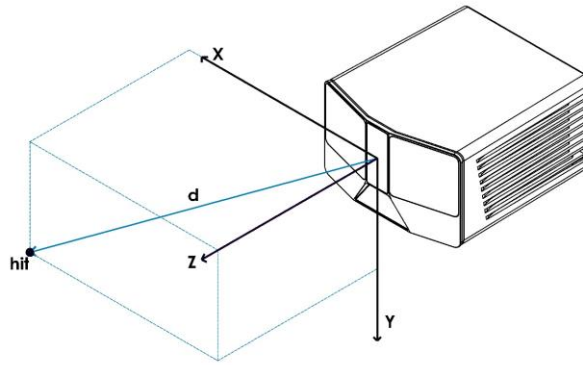


Figure 29. Point cloud reference coordinate system.




Figure 30. Colour scale for distance (a) and intensity (b).

When all data packets have been sent, L3CAM signals the end of transmission of the point cloud frame with a footer package with STX = 0x03:

Table 9. Point cloud frame footer.

FIELD	STX
SIZE (Bytes)	1
Value	0x03

In APPENDIX 1 there is a sample code describing how to read the point cloud frame from the host.

3.2.2 Image

The transmission sequence of an image frame is described in Figure 31. Note that in systems with the perception functions enabled, the image data is complemented with the result of the perception AI algorithms.

³ Colour scales can be changed with the API.



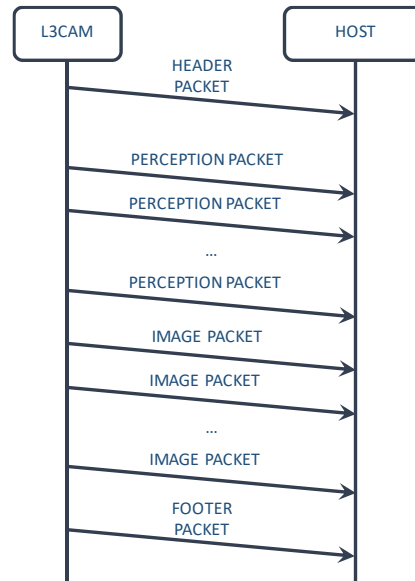


Figure 31. Transmission sequence of image data with results from perception functions.

The transmission begins with a header packet. Then, if the perception functions have detected objects in the image, L3CAM transmits as many perception packets as necessary. The transmission continues with the image packets and ends with a footer packet.

The header packet is as follows:

Table 10. Image frame header.

FIELD	STX	WI	HE	CHANNELS	TIMESTAMP	N_DET
SIZE (Bytes)	1	2 (int16_t)	2 (int16_t)	1 (byte)	4 (uint32_t)	1 (byte)
Value	0x02					

where:

- STX is a header packet identifier with value 0x02;
- WI: image width in pixels;
- WH: image height in pixels;
- Channels: number of channels in the image;
- Timestamp: an integer that represents the time when the frame was received. The time is in the L3CAM Jetson TX2 time and contains **hhmmsszzz**. For example, a frame received at 18:32:12:346 will return the timestamp value 183212346;
- N_DET: number of object detections.

If the perception functions are enabled and L3CAM detects objects, it sends one perception packet per object detected. Each perception packet contains the 2D coordinates of the bounding rectangle of the detected object along with the confidence level of the detection. The structure of the perception packet is described in Table 11.

Version:	1.5		Page:	30/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

L3CAM User manual

Table 11. Perception packet.

FIELD	Conf	X0	Y0	HE	WI	Label
SIZE (Bytes)	2 (uint16_t)	2 (int16_t)	2 (int16_t)	2 (int16_t)	2 (int16_t)	2 (uint16_t)

Where:

- Conf: confidence level; range [0-100].
- X0: x coordinate of the origin of the bounding box of the detected object (in pixels).
- Y0: y coordinate of the origin of the bounding box of the detected object (in pixels).
- HE: height of the bounding box (in pixels).
- WI: width of the bounding box (in pixels).
- Label: Index that represents the class of the detected object.

After the perception packets, or in case there are no perception packets, L3CAM starts sending the image packets. The image packets have a size of 8000 bytes. The last image packet can have a smaller size.

The end of transmission (footer) package is:

Table 12. Point cloud frame footer.

FIELD	STX
SIZE (Bytes)	1
Value	0x03

In APPENDIX 2 there is a sample code describing how the read images from the UDP stream.



Beamagine S.L.
info@beamagine.com
<https://beamagine.com/>



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	31/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

3.3 RTSP PROTOCOL AND DATA DESCRIPTION

In this mode, L3CAM generates a separate pipeline for each sensor using the GStreamer API. The internal pipelines are shown in the next table. The pipelines can be modified using the API calls described in the API section. By default, L3CAM sends the video streams using the H264 compression.

Table 13. GStreamer pipeline.

SENSOR	GSTREAMER PIPELINE
LIDAR	appsrc ! video/x-raw,format=BGR,width=720,height=480 framerate=10/1 ! videoscale ! videoconvert ! nvvidconv ! nvv4l2h264enc control-rate=constant_bitrate bitrate=8000000 preset-level=2 maxperf-enable=1 ! video/x-h264, stream-format=byte-stream ! h264parse ! rtph264pay pt=96 mtu=8950 ! udpsink host=@host_ip port=5040
Polarimetric Camera	appsrc ! video/x-raw,format=BGR,width=2448,height=2048 framerate=10/1 ! videoscale ! videoconvert ! nvvidconv ! nvv4l2h264enc control-rate=constant_bitrate bitrate=8000000 preset-level=2 maxperf-enable=1 ! video/x-h264, stream-format=byte-stream ! h264parse ! rtph264pay pt=96 mtu=8950 ! udpsink host=@host_ip port=5030
RGB Camera	appsrc ! video/x-raw,format=BGR,width=1920,height=1080 framerate=10/1 ! videoscale ! videoconvert ! nvvidconv ! nvv4l2h264enc control-rate=constant_bitrate bitrate=8000000 preset-level=2 maxperf-enable=1 ! video/x-h264, stream-format=byte-stream ! h264parse ! rtph264pay pt=96 mtu=8950 ! udpsink host=@host_ip port=5010
LWIR Thermal Camera	appsrc ! video/x-raw,format=BGR,width=320,height=240 framerate=10/1 ! videoscale ! videoconvert ! nvvidconv ! nvv4l2h264enc control-rate=constant_bitrate bitrate=8000000 preset-level=2 maxperf-enable=1 ! video/x-h264, stream-format=byte-stream ! h264parse ! rtph264pay pt=96 mtu=8950 ! udpsink host=@host_ip port=5020
Allied Wide RGB Camera 1800 U-508c	appsrc ! video/x-raw,format=BGR,width=1232,height=1028 framerate=10/1 ! videoscale ! videoconvert ! nvvidconv ! nvv4l2h264enc control-rate=constant_bitrate bitrate=8000000 preset-level=2 maxperf-enable=1 ! video/x-h264, stream-format=byte-stream ! h264parse ! rtph264pay pt=96 mtu=8950 ! udpsink host=@host_ip port=5030
Allied Narrow RGB Camera 1800 U-319c	appsrc ! video/x-raw,format=BGR,width=2064,height=1554 framerate=10/1 ! videoscale ! videoconvert ! nvvidconv ! nvv4l2h264enc control-rate=constant_bitrate bitrate=8000000 preset-level=2 maxperf-enable=1 ! video/x-h264, stream-format=byte-stream ! h264parse ! rtph264pay pt=96 mtu=8950 ! udpsink host=@host_ip port=5010



Version:	1.5	 BEAM\A\GINE L3CAM User manual	Page:	32/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

3.3.1 Point cloud

The LIDAR image resolution is not a video standard, and to be able to send it over RTSP using GStreamer API it is necessary to add black padding on the right and the bottom of the image before sending it over RTSP.

The result is a 720x480 pixels image sent over RTSP, and this black padding can be removed in the same pipeline used to receive the RTSP stream as shown in the example below.

```
gst-launch-1.0 udpsrc address="@host_ip" port=5040 ! application/x-
rtp,media=video,payload=96,clock-rate=90000,encoding-name=H264,framerate=10/1 !
rtph264depay ! h264parse ! decodebin ! videocrop top=0, left=0, right=40,
bottom=230 ! autovideosink sync=false show-preroll-frame=false
```

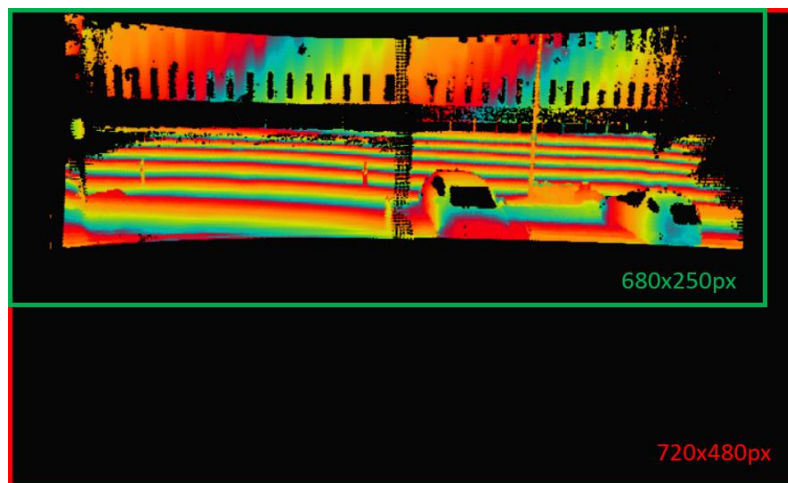


Figure 32. Point cloud and cropping area.

3.3.2 Image

To receive the RTSP video stream from the Polarimetric camera the following pipeline can be used.

```
gst-launch-1.0 udpsrc address="@host_ip" port=5030 ! application/x-
rtp,media=video,payload=96,clock-rate=90000,encoding-name=H264,framerate=10/1 !
rtph264depay ! h264parse ! decodebin ! autovideosink sync=false show-preroll-
frame=false
```



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	33/124
Author/s:	Eduardo Bernal, Pablo García, Ana Rodríguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023



Figure 33. Polarimetric Bayer image. See image format in APPENDIX 3.

3.3.3 Image RGB

To receive the RTSP video stream from the RGB camera the following pipeline can be used.

```
gst-launch-1.0 udpsrc address="@host_ip" port=5010 ! application/x-
rtp,media=video,payload=96,clock-rate=90000,encoding-name=H264,framerate=10/1 !
rtph264depay ! h264parse ! decodebin ! autovideosink sync=false show-preroll-
frame=false
```



Figure 34. RGB image from econ camera

Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	34/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

3.3.4 Thermal image

To receive RTSP video stream from the Thermal camera the following pipeline can be used

```
gst-launch-1.0 udpsrc address="@host_ip" port=5050 ! application/x-
rtp,media=video,payload=96,clock-rate=90000,encoding-name=H264,framerate=10/1 !
rtph264depay ! h264parse ! decodebin ! autovideosink sync=false show-preroll-
frame=false
```

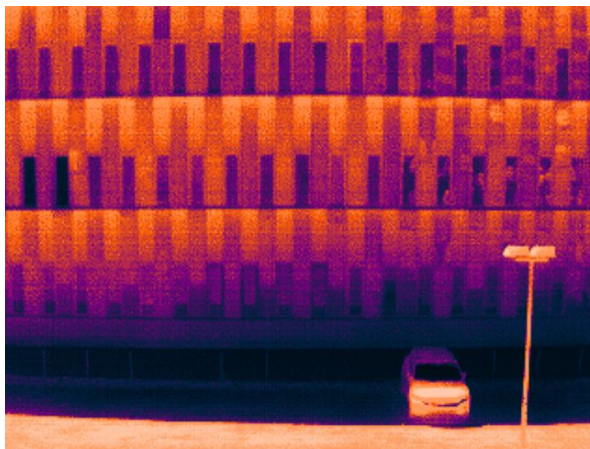


Figure 35. Thermal image using TYRIAN colormap

3.3.5 Image RGB Allied Wide

The Allied sensor 1800 U-508c is configured with the KOW-LM6JC lens, that generates the wide field of view. The image resolution is 1232x1028.

To receive the RTSP video stream from the allied wide camera the following pipeline can be used.

```
gst-launch-1.0 -v udpsrc port=5030 caps="application/x-rtp, media=(string)video,
clock-rate=(int)90000, encoding-name=(string)H264, payload=(int)96,
height=(string)1028, width=(string)1232, framerate=(fraction)10/1 " !
rtph264depay ! decodebin ! videoconvert ! autovideosink window-width=640, window-
height=480
```



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	35/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023



Figure 36. Allied 1800 U-508c with KOW-LM6JC

3.3.6 Image RGB Allied Narrow

The Allied sensor 1800 U-319c is configured with the M2514-MP2 lens, that generates the narrow field of view. The image resolution is 2064x1554.

To receive the RTSP video stream from the allied narrow camera the following pipeline can be used.

```
gst-launch-1.0 -v udpsrc port=5010 caps="application/x-rtp, media=(string)video,
clock-rate=(int)90000, encoding-name=(string)H264, payload=(int)96,
height=(string)1544, width=(string)2064, framerate=(fraction)10/1 " !
rtph264depay ! decodebin ! videoconvert ! autovideosink window-width=640, window-
height=480
```



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	36/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023



Figure 37. Allied 1800 U-319c with M2514-MP2

3.4 API FUNCTIONS LIST

The following table lists the functions of the library libL3Cam. Please note that the code to receive image data and point cloud data is not included in the API. It is the responsibility of the user to implement those functions following the examples provided in the appendixes.

Table 14. API functions.

FUNCTION NAME	CATEGORY
getBeamErrorDescription	Initialization and support
GET_VERSION	Initialization and support
INITIALIZE	Networking
TERMINATE	Finalization support
FIND_DEVICES	Initialization and support
GET_LOCAL_SERVER_ADDRESS	Initialization and support
GET_DEVICE_STATUS	Initialization and support
GET_SENSORS_AVAILABLE	Initialization and support
CHANGE_STREAMING_PROTOCOL	Networking
GET_RTSP_PIPELINE	Networking
CHANGE_RTSP_PIPELINE	Networking
GET_NETWORK_CONFIGURATION	Networking
CHANGE_NETWORK_CONFIGURATION	Networking
POWER_OFF_DEVICE	Operation sequence
START_DEVICE	Operation sequence
STOP_DEVICE	Operation sequence



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	37/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodríguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

FUNCTION NAME	CATEGORY
START_STREAM	Operation sequence
STOP_STREAM	Operation sequence
CHANGE_POINTCLOUD_COLOR	Behaviour
CHANGE_POINTCLOUD_COLOR_RANGE	Behaviour
CHANGE_DISTANCE_RANGE	Behaviour
GET_DEVICE_TEMPERATURES	Behaviour
SET_BIAS_LONG_RANGE	Behaviour
SET_BIAS_SHORT_RANGE	Behaviour
SET_POLARIMETRIC_CAMERA_DEFAULT_SETTINGS	Behaviour
CHANGE_POLARIMETRIC_CAMERA_BRIGHTNESS	Behaviour
CHANGE_POLARIMETRIC_CAMERA_BLACK_LEVEL	Behaviour
ENABLE_POLARIMETRIC_CAMERA_AUTO_GAIN	Behaviour
CHANGE_POLARIMETRIC_CAMERA_AUTO_GAIN_RANGE	Behaviour
CHANGE_POLARIMETRIC_CAMERA_GAIN	Behaviour
ENABLE_POLARIMETRIC_CAMERA_AUTO_EXPOSURE_TIME	Behaviour
CHANGE_POLARIMETRIC_CAMERA_AUTO_EXPOSURE_TIME_RANGE	Behaviour
CHANGE_POLARIMETRIC_CAMERA_EXPOSURE_TIME	Behaviour
SET_RGB_CAMERA_DEFAULT_SETTINGS	Behaviour
CHANGE_RGB_CAMERA_BRIGHTNESS	Behaviour
CHANGE_RGB_CAMERA_CONTRAST	Behaviour
CHANGE_RGB_CAMERA_SATURATION	Behaviour
CHANGE_RGB_CAMERA_SHARPNESS	Behaviour
CHANGE_RGB_CAMERA_GAMMA	Behaviour
CHANGE_RGB_CAMERA_GAIN	Behaviour
CHANGE_RGB_CAMERA_WHITE_BALANCE	Behaviour
CHANGE_RGB_CAMERA_EXPOSURE_TIME	Behaviour
ENABLE_RGB_CAMERA_AUTO_WHITE_BALANCE	Behaviour
ENABLE_RGB_CAMERA_AUTO_EXPOSURE_TIME	Behaviour
CHANGE_RGB_CAMERA_RESOLUTION	Behaviour
CHANGE_RGB_CAMERA_FRAMERATE	Behaviour
CHANGE_THERMAL_CAMERA_COLORMAP	Behaviour
ENABLE_THERMAL_CAMERA_TEMPERATURE_FILTER	Behaviour
CHANGE_THERMAL_CAMERA_TEMPERATURE_FILTER	Behaviour
CHANGE_ALLIED_CAMERA_BLACK_LEVEL	Behaviour
CHANGE_ALLIED_CAMERA_EXPOSURE_TIME_US	Behaviour
ENABLE_ALLIED_CAMERA_AUTO_EXPOSURE_TIME	Behaviour
CHANGE_ALLIED_CAMERA_AUTO_EXPOSURE_TIME_RANGE	Behaviour
CHANGE_ALLIED_CAMERA_GAIN	Behaviour
ENABLE_ALLIED_CAMERA_AUTO_GAIN	Behaviour
CHANGE_ALLIED_CAMERA_AUTO_GAIN_RANGE	Behaviour
CHANGE_ALLIED_CAMERA_GAMMA	Behaviour
CHANGE_ALLIED_CAMERA_SATURATION	Behaviour
CHANGE_ALLIED_CAMERA_SHARPNESS	Behaviour
CHANGE_ALLIED_CAMERA_HUE	Behaviour
CHANGE_ALLIED_CAMERA_INTENSITY_AUTO_PRECEDENCE	Behaviour
ENABLE_ALLIED_CAMERA_AUTO_WHITE_BALANCE	Behaviour
CHANGE_ALLIED_CAMERA_BALANCE_RATIO_SELECTOR	Behaviour



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	38/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

FUNCTION NAME	CATEGORY
CHANGE_ALLIED_CAMERA_BALANCE_WHITE_AUTO_RATE	Behaviour
CHANGE_ALLIED_CAMERA_BALANCE_AUTO_TOLERANCE	Behaviour
CHANGE_ALLIED_CAMERA_AUTO_MODE_REGION	Behaviour
CHANGE_ALLIED_CAMERA_INTENSITY_CONTROLLER_REGION	Behaviour
CHANGE_ALLIED_CAMERA_INTENSITY_CONTROLLER_TARGET	Behaviour
CHANGE_ALLIED_CAMERA_MAX_DRIVER_BUFFERS_COUNT	Behaviour



Beamagine S.L.
info@beamagine.com
<https://beamagine.com/>



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	39/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

3.5 API FUNCTIONS DESCRIPTION

getBeamErrorDescription

```
const char * getBeamErrorDescription(int error_code);
```

Description

Returns the description of the error code returned by any of the library functions.

Parameters

error_code	Integer with the returned error code.
------------	---------------------------------------

Returns

Char pointer with the description of the error returned by the library.

Example

```
char *desc = NULL;
int32_t error = L3CAM_OK;

error = INITIALIZE();
desc = getBeamErrorDescription(error);
printf("Initialize response %d - %s\n", error, desc);
```



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	40/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

GET_VERSION

```
const char * GET_VERSION();
```

Description

Returns the version of the library.

Returns

Char pointer with the version of the library.

Example

```
char *version = NULL;
version = GET_VERSION();
printf("Library version %s\n", version);
```



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	41/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

INITIALIZE

```
int INITIALIZE();
```

Description

This function initializes the library. Internally starts the TCP port for communications with an L3Cam device, and starts the discovery thread to find L3Cam devices in the network.

Example

```
char *desc = NULL;
int32_t error = L3CAM_OK;

error = INITIALIZE();
desc = getBeamErrorDescription(error);
printf("Initialize response %d - %s\n", error, desc);
```



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	42/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

TERMINATE

```
int TERMINATE(l3cam device);
```

Description

This function closes the library communications. Internally stops the TCP communications with an L3Cam device.

Example

```
char *desc = NULL;
int32_t error = L3CAM_OK;

error = TERMINATE(deevices[0]);
desc = getBeamErrorDescription(error);
printf("Terminate response %d - %s\n", error, desc);
```



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	43/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

FIND_DEVICES

```
int FIND_DEVICES (l3cam devices[], int *num_devices);
```

Description

Call this function to get the available devices found in the host network, the current version of the library only allows communications with a single L3CAM device, so the l3cam array should be initialized with one item as described in the example.

Parameters

devices []	Array to store the available devices in the network with l3cam structure.
num_devices	Pointer to integer where the number of devices found is returned.

Example

```
int num_devices = 0;
l3cam devices[1];
char *desc = NULL;

int32_t error = FIND_DEVICES(devices, &num_devices);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Get devices response %d - %s\n", error, desc);
}

if(num_devices > 0){
    printf("ip address of device %s\n", devices[0].ip_address);
}
```



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	44/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

GET_LOCAL_SERVER_ADDRESS

```
const char * GET_LOCAL_SERVER_ADDRESS (l3cam device);
```

Description

Call this function to get the local address of the NIC where the L3CAM has been connected.

Parameters

Device	Structure of an available device to execute the function.
--------	---

Returns

Char pointer with the IP address of the NIC where L3CAM device is connected.

Example

```
char *local_ip_address = NULL;

local_ip_address = GET_LOCAL_SERVER_ADDRESS(devices[0]);

printf("Library version %s\n", local_ip_address);
```



Version:	1.5		Page:	45/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

L3CAM User manual

GET_DEVICE_STATUS

```
int GET_DEVICE_STATUS (l3cam device, int32_t *system_status);
```

Description

Call this function to get the current device status. See status definition for more information.

Parameters

device	Structure of an available device to execute the function.
system_status	Pointer to an integer (32 bit) where the status is returned.

Example

```
int32_t system_status = 0;
char *desc = NULL;

int32_t error = GET_DEVICE_STATUS(devices[0], &system_status);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Get device status response %d - %s\n", error, desc);
}

printf("System status %d\n", system_status);
```



Beamagine S.L.
info@beamagine.com
<https://beamagine.com/>



Version:	1.5		Page:	46/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

L3CAM User manual

GET_SENSORS_AVAILABLE

```
int GET_SENSORS_AVAILABLE (l3cam device, sensor sensors [], int *num_sensors);
```

Description

Call this function to get the available sensors and the information of each sensor in the device. The number of sensors available will vary depending on the L3CAM model.

Parameters

device	Structure of an available device to execute the function.
sensors[]	Sensor struct array to store the sensors data.
num_sensors	Pointer to store the number of sensors available in the device

Example

```
int num_sensors = 0;
sensor av_sensors[6];
char *desc = NULL;

int32_t error = GET_SENSORS_AVAILABLE(devices[0], av_sensors, &num_sensors);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Get sensors available response %d - %s\n", error, desc);
}
```



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	47/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

CHANGE_STREAMING_PROTOCOL

```
int CHANGE_STREAMING_PROTOCOL (l3cam device, sensor *sensor_id);
```

Description

Call this function to change the streaming protocol for the desired sensor. See 3.2 for more information.

Parameters

device	Structure of an available device to execute the function.
sensor_id	Pointer to the sensor to change the protocol

Example

```
char *desc = NULL;
av_sensors[0].protocol = protocol_gstreamer;

int32_t error = CHANGE_STREAMING_PROTOCOL(devices[0], &av_sensors[0]);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Change streaming protocol response %d - %s\n", error, desc);
}
```



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	48/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

GET_RTSP_PIPELINE

```
int GET_RTSP_PIPELINE(l3cam device, sensor sensor_id, char **pipeline);
```

Description

Call this function to get the current RTSP pipeline of a specific sensor.

Parameters

device	Structure of an available device to execute the function.
sensor_id	The sensor to get the RTSP pipeline
pipeline	Pointer to a pointer with the pipeline string

Example

```
char *desc = NULL;
char *rtsp_pipeline = NULL;

int32_t error = GET_RTSP_PIPELINE(devices[0], av_sensors[0], &rtsp_pipeline);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Get RTSP pipeline response %d - %s\n", error, desc);
}
else{
    print("%s \n", rtsp_pipeline);
}
```



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	49/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

CHANGE_RTSP_PIPELINE

```
int CHANGE_RTSP_PIPELINE(l3cam device, sensor sensor_id, char *pipeline);
```

Description

Call this function to change the current RTSP pipeline of the specific sensor.

Parameters

device	Structure of an available device to execute the function.
sensor_id	The sensor to change the RTSP pipeline
pipeline	Pointer with the new pipeline string

Example

```
char *desc = NULL;

int32_t error = L3CAM_OK;

error = CHANGE_RTSP_PIPELINE(devices[0], av_sensors[0], "new_pipeline");

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Initialize response %d - %s\n", error, desc);
}
```



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	50/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

GET_NETWORK_CONFIGURATION

```
int GET_NETWORK_CONFIGURATION(l3cam device, char **ip_address, char **netmask,
                             char **gateway);
```

Description

Call this function to get the current network configuration of the L3CAM device.

Parameters

device	Structure of an available device to execute the function.
ip_address	Pointer to pointer where the IP address is returned
netmask	Pointer to pointer where the netmask is returned as string
gateway	Pointer to pointer where the gateway is returned

Example

```
char *desc = NULL;
char *address = NULL;
char *netmask = NULL;
char *gateway = NULL;

int32_t error = L3CAM_OK;
error = GET_NETWORK_CONFIGURATION(devices[0], &address, &netmask, &gateway);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Get network configuration response %d - %s\n", error, desc);
}else{
    printf("address %s netmask %s gateway %s\n", address, netmask, gateway);
}
```



Version:	1.5		Page:	51/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

L3CAM User manual

CHANGE_NETWORK_CONFIGURATION

```
int CHANGE_NETWORK_CONFIGURATION(l3cam device, char *ip_address,
                                char *netmask, char *gateway, bool enable_dhcp);
```

Description

Call this function to change the L3Cam device network configuration.

Parameters

device	Structure of an available device to execute the function.
ip_address	Pointer with the new IP address
netmask	Pointer with the new netmask as a string
gateway	Pointer with the new gateway
enable_dhcp	Boolean to enable or disable the DHCP functionality of the L3CAM

Example

```
char *desc = NULL;

/*FIXED IP ADDRESS DISABLES DHCP*/

int32_t error = L3CAM_OK;
error = CHANGE_NETWORK_CONFIGURATION(devices[0],
                                     "192.168.5.15", "255.255.255.0", "0.0.0.0",
                                     false);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Change network response %d - %s\n", error, desc);
}

/*DYNAMIC IP ADDRESS ENABLES DHCP*/

int32_t error = L3CAM_OK;
error = CHANGE_NETWORK_CONFIGURATION(devices[0], NULL, NULL, NULL, true);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Change network response %d - %s\n", error, desc);
}
```



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	52/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

POWER_OFF_DEVICE

```
void POWER_OFF_DEVICE (l3cam device);
```

Description

Call this function to properly shut down the L3CAM device.

Parameters

Device	Structure of an available device to execute the function.
--------	---

Example

```
POWER_OFF_DEVICE(devices[0]);
```



Version:	1.5	 BEAM\ENGINE L3CAM User manual	Page:	53/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

START_DEVICE

```
int START_DEVICE (l3cam device);
```

Description

Call this function to initialize the device, it initializes all the internal sensors and the streaming protocols. This call sends the current date-time of the host to the L3CAM to synchronize the date-time of the sensor and get correct timestamp values.

Parameters

device	Structure of an available device to execute the function.
--------	---

Example

```
char *desc = NULL;

int32_t error = L3CAM_OK;
error = START_DEVICE(devices[0]);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Start device response %d - %s\n", error, desc);
}
```



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	54/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

STOP_DEVICE

```
int STOP_DEVICE (l3cam device);
```

Description

Call this function to stop the device. It stops the internal sensors and streaming protocols.

Parameters

device	Structure of an available device to execute the function.
--------	---

Example

```
char *desc = NULL;

int32_t error = L3CAM_OK;
error = STOP_DEVICE(devices[0]);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Stop device response %d - %s\n", error, desc);
}
```



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	55/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

START_STREAM

```
int START_STREAM (l3cam device);
```

Description

Call this function to start the streaming of the device. Each sensor will stream with the selected streaming protocol. See 3.1 and 3.2 for more information.

Parameters

device	Structure of an available device to execute the function.
--------	---

Example

```
char *desc = NULL;

int32_t error = L3CAM_OK;
error = START_STREAM(devices[0]);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Start stream response %d - %s\n", error, desc);
}
```



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	56/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

STOP_STREAM

```
int STOP_STREAM (l3cam device);
```

Description

Call this function to stop the sensors from streaming.

Parameters

device	Structure of an available device to execute the function.
--------	---

Example

```
char *desc = NULL;

int32_t error = L3CAM_OK;
error = STOP_STREAM(devices[0]);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Stop stream response %d - %s\n", error, desc);
}
```



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	57/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

CHANGE_POINTCLOUD_COLOR

```
int CHANGE_POINTCLOUD_COLOR(l3cam device, int visualization_color);
```

Description

Call this function to change the colour representation of the point cloud. See 3.2 and APPENDIX 6 for more information about point cloud colours.

Parameters

device	Structure of an available device to execute the function.
visualization_color	Integer with the colour of the point cloud.

Example

```
char *desc = NULL;
int32_t error = CHANGE_POINTCLOUD_COLOR(devices[0], RAINBOW_Z);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Change pointcloud color response %d - %s\n", error, desc);
}
```



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	58/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

CHANGE_POINTCLOUD_COLOR_RANGE

```
int CHANGE_POINTCLOUD_COLOR_RANGE(l3cam device, int min_value, int max_value);
```

Description

Call this function to change the colour range representation of the point cloud. See 3.2 and APPENDIX 6 for more information about point cloud colours.

Parameters

device	Structure of an available device to execute the function.
min_value	Minimum value for the colour representation.
max_value	Maximum value for the colour representation.

Example

```
char *desc = NULL;
int32_t error = CHANGE_POINTCLOUD_COLOR_RANGE(devices[0], 5000, 0);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Change pointcloud color range response %d - %s\n", error, desc);
}
```



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	59/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

CHANGE_DISTANCE_RANGE

```
int CHANGE_DISTANCE_RANGE(l3cam device, int min_distance, int max_distance);
```

Description

Call this function to apply a distance filter to the point cloud. The resulting point cloud will show the points delimited between the minimum distance and the maximum distance.

Parameters

device	Structure of an available device to execute the function.
min_distance	Minimum distance of the point cloud, the value is in millimetres (mm)
max_distance	Maximum distance of the point cloud, the value is in millimetres (mm)

Example

```
char *desc = NULL;

int32_t error = L3CAM_OK;
//!filter the pointcloud between 2 meters and 30 meters
error = CHANGE_DISTANCE_RANGE(devices[0], 2000, 30000);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Change distance range response %d - %s\n", error, desc);
}
```



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	60/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

GET_DEVICE_TEMPERATURES

```
int CHANGE_DEVICE_TEMPERATURES(l3cam device, int32_t *device_temperatures);
```

Description

Call this function to get the temperature information of the available sensors in the L3CAM device. The values returned have to be divided by 1000.0 in order to have the real value with 3 decimal numbers.

The temperature sensors available are given in an int32_t pointer in the following order:

Table 15. Device temperatures pointer content

Pointer index	Value
0	Jetson TX2 BCPU
1	Jetson TX2 MCPU
2	Jetson TX2 MGPU
3	Jetson TX2 PLL
4	Jetson TX2 BOARD
5	Jetson TX2 DIODE
6	Jetson TX2 PMIC
7	Jetson TX2 FAN
8	Beamagine Interface board
9	Allied 508c
10	Allied 319c

Parameters

device	Structure of an available device to execute the function.
device_temperatures	Integer pointer where temperatures are stored in Celsius.



Beamagine S.L.
info@beamagine.com
<https://beamagine.com/>



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	61/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

Example

```

char *desc = NULL;

int32_t error = L3CAM_OK;
int32_t *temperatures = (int32_t*)malloc(sizeof(int32_t)*11);

error = GET_DEVICE_TEMPERATURES(devices[0], temperatures);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Device temperatures response %d - %s\n", error, desc);
}else{
    printf("Jetson TX2 BCPU temperature %f °C\n", temperatures[0]/1000.0);
    printf("Interface temperature %f °C\n", temperatures[8]/1000.0);
    printf("Allied 508 temperature %f °C\n", temperatures[9]/1000.0);
    printf("Allied 319 temperature %f °C\n", temperatures[10]/1000.0);
}

free(temperatures);

```



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	62/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

SET_BIAS_LONG_RANGE

```
int SET_BIAS_LONG_RANGE(l3cam device);
```

Description

Call this function to enable the L3CAM maximum range for the autogain algorithm. This function is useful when using the L3CAM in outdoors and day conditions.

Parameters

device	Structure of an available device to execute the function.
--------	---

Example

```
char *desc = NULL;

int32_t error = L3CAM_OK;
error = SET_BIAS_LONG_RANGE(devices[0]);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Set bias long range response %d - %s\n", error, desc);
}
```



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	63/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

SET_BIAS_SHORT_RANGE

```
int SET_BIAS_SHORT_RANGE(l3cam device);
```

Description

Call this function to enable the L3CAM minimum range for the autogain algorithm. This function is useful when using the L3CAM in indoors or outdoors night conditions.

Parameters

device	Structure of an available device to execute the function.
--------	---

Example

```
char *desc = NULL;

int32_t error = L3CAM_OK;
error = SET_BIAS_SHORT_RANGE(devices[0]);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Set bias short range response %d - %s\n", error, desc);
}
```



Version:	1.5		Page:	64/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

L3CAM User manual

SET_POLARIMETRIC_CAMERA_DEFAULT_SETTINGS

```
int SET_POLARIMETRIC_CAMERA_DEFAULT_SETTINGS(l3cam device);
```

Description

Call this function to change all the polarimetric camera parameters to the system defaults.

Parameters

device	Structure of an available device to execute the function.
--------	---

Example

```
char *desc = NULL;

int32_t error = L3CAM_OK;
error = SET_POLARIMETRIC_CAMERA_DEFAULT_SETTINGS(devices[0]);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Set polarimetric camera default parameters response %d - %s\n",
        error, desc);
}
```



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	65/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

CHANGE_POLARIMETRIC_CAMERA_BRIGHTNESS

```
int CHANGE_POLARIMETRIC_CAMERA_BRIGHTNESS(l3cam device, int brightness);
```

Description

Call this function to change the camera brightness.

Parameters

device	Structure of an available device to execute the function.
brightness	Integer with the new brightness value. The range value is 0 - 255

Example

```
char *desc = NULL;

int32_t error = L3CAM_OK;
error = CHANGE_POLARIMETRIC_CAMERA_BRIGHTNESS(devices[0], 210);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Change polarimetric brightness response %d - %s\n", error, desc);
}
```



Version:	1.5		Page:	66/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

L3CAM User manual

CHANGE_POLARIMETRIC_CAMERA_BLACK_LEVEL

```
int CHANGE_POLARIMETRIC_CAMERA_BLACK_LEVEL(l3cam device, float black_level);
```

Description

Call this function to change the black level of the polarimetric camera.

Parameters

device	Structure of an available device to execute the function.
black_level	Float with the new black level value. The range value is 0 – 12.5

Example

```
char *desc = NULL;

int32_t error = L3CAM_OK;
error = CHANGE_POLARIMETRIC_BLACK_LEVEL(devices[0], 8.5);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Change polarimetric black level response %d - %s\n", error, desc);
}
```



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	67/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

ENABLE_POLARIMETRIC_CAMERA_AUTO_GAIN

```
int ENABLE_POLARIMETRIC_CAMERA_AUTO_GAIN(l3cam device, bool enabled);
```

Description

Call this function to enable or disable the auto-gain feature of the polarimetric camera.

Parameters

device	Structure of an available device to execute the function.
enabled	Boolean to enable/disable the auto gain feature. true to enable auto gain and false to disable it.

Example

```
char *desc = NULL;

int32_t error = L3CAM_OK;
error = ENABLE_POLARIMETRIC_CAMERA_AUTO_GAIN(devices[0], true);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Enable polarimetric auto gain response %d - %s\n", error, desc);
}
```



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	68/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

CHANGE_POLARIMETRIC_CAMERA_AUTO_GAIN_RANGE

```
int CHANGE_POLARIMETRIC_CAMERA_AUTO_GAIN_RANGE(l3cam device, float min_gain,
                                                float max_gain);
```

Description

Call this function to change the range of the polarimetric camera auto-gain feature. When the auto-gain feature is enabled, the camera will adjust it using the range of the specified values.

Parameters

device	Structure of an available device to execute the function.
min_gain	Float with the minimum gain value for the auto-gain feature. The range is 0 – 48.0 dB
max_gain	Float with the maximum gain value for the auto-gain feature. The range is 0 – 48.0 dB

Example

```
char *desc = NULL;

int32_t error = L3CAM_OK;
error = CHANGE_POLARIMETRIC_CAMERA_AUTO_GAIN_RANGE(devices[0], 20.5, 35.0);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Change polarimetric auto gain range response %d - %s\n", error,
        desc);
}
```



Version:	1.5		Page:	69/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

L3CAM User manual

CHANGE_POLARIMETRIC_CAMERA_GAIN

```
int CHANGE_POLARIMETRIC_CAMERA_GAIN(l3cam device, float gain);
```

Description

Call this function to manually set the gain of the polarimetric camera. The auto gain feature must be disabled to use this function

Parameters

device	Structure of an available device to execute the function.
gain	The value of the gain. The range is 0 – 48.0 dB

Example

```
char *desc = NULL;

int32_t error = L3CAM_OK;
//! Disable the polarimetric autogain
error = ENABLE_POLARIMETRIC_CAMERA_AUTO_GAIN(devices[0], false)

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Disable polarimetric auto gain response %d - %s\n", error, desc);
}
else{
    error = CHANGE_POLARIMETRIC_CAMERA_GAIN(devices[0], 30.0);
    if(error != L3CAM_OK){
        desc = getBeamErrorDescription(error);
        printf("Change polarimetric camera gain response %d - %s\n", error, desc);
    }
}
```



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	70/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

ENABLE_POLARIMETRIC_CAMERA_AUTO_EXPOSURE_TIME

```
int ENABLE_POLARIMETRIC_CAMERA_AUTO_EXPOSURE_TIME(l3cam device, bool enabled);
```

Description

Call this function to enable or disable the auto-exposure time feature of the polarimetric camera.

Parameters

device	Structure of an available device to execute the function.
enabled	Boolean to enable/disable the auto-exposure time feature. True to enable auto exposure time and false to disable it.

Example

```
char *desc = NULL;

int32_t error = L3CAM_OK;

error = ENABLE_POLARIMETRIC_CAMERA_AUTO_EXPOSURE_TIME(devices[0], true);
if(error != L3CAM_OK ){
    desc = getBeamErrorDescription(error);
    printf("Enable polarimetric auto exposure time response %d - %s\n",
        error, desc);
}
```



Version:	1.5	 BEAM\ENGINE L3CAM User manual	Page:	71/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

CHANGE_POLARIMETRIC_CAMERA_AUTO_EXPOSURE_TIME_RANGE

```
int CHANGE_POLARIMETRIC_CAMERA_AUTO_EXPOSURE_TIME_RANGE(l3cam device,
float min_exposure, float min_exposure);
```

Description

Call this function to change the auto-exposure time values range. When the auto-exposure time feature is enabled, the value will vary in the range of the specified values.

Parameters

device	Structure of an available device to execute the function.
min_exposure	Float with the minimum exposure time value for the auto exposure time feature. The range is 33.456us to 1000000.0us
max_exposure	Float with the maximum exposure time value for the auto exposure time feature. The range is 33.456us to 1000000.0us

Example

```
char *desc = NULL;

int32_t error = L3CAM_OK;
error = CHANGE_POLARIMETRIC_CAMERA_AUTO_EXPOSURE_TIME_RANGE(devices[0], 100.0,
500.0);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Change Polarimetric auto exposure time response %d - %s\n",
        error, desc);
}
```



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	72/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

CHANGE_POLARIMETRIC_CAMERA_EXPOSURE_TIME

```
int CHANGE_POLARIMETRIC_CAMERA_EXPOSURE_TIME(l3cam device,
                                              float exposure_time);
```

Description

Call this function to change the polarimetric camera exposure time. The auto-exposure time must be disabled to be able to use this function.

Parameters

device	Structure of an available device to execute the function.
exposure_time	Float with the exposure time value. The range is 33.456us to 1000000.0us

Example

```
char *desc = NULL;
int32_t error = L3CAM_OK;
//! Disable the polarimetric auto exposure time
error = ENABLE_POLARIMETRIC_CAMERA_AUTO_EXPOSURE_TIME(devices[0], false)

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Disable polarimetric auto exposure time response %d - %s\n",
           error, desc);
}
else{
    error = CHANGE_POLARIMETRIC_CAMERA_EXPOSURE_TIME(devices[0], 300.0);
    if(error != L3CAM_OK){
        desc = getBeamErrorDescription(error);
        printf("Change polarimetric camera exposure time response %d - %s\n",
               error, desc);
    }
}
```



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	73/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

SET_RGB_CAMERA_DEFAULT_SETTINGS

```
int SET_RB_CAMERA_DEFAULT_SETTINGS(l3cam device);
```

Description

Call this function to change all the RGB camera parameters to the system defaults.

Parameters

device	Structure of an available device to execute the function.
--------	---

Example

```
char *desc = NULL;

int32_t error = L3CAM_OK;
error = SET_RGB_CAMERA_DEFAULT_SETTINGS(devices[0]);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Set RGB camera default parameters response %d - %s\n",
        error, desc);
}
```



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	74/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

CHANGE_RGB_CAMERA_BRIGHTNESS

```
int CHANGE_RGB_CAMERA_BRIGHTNESS(l3cam device, int brightness);
```

Description

Call this function to change the camera brightness.

Parameters

device	Structure of an available device to execute the function.
brightness	Integer with the new brightness value. The range value is -15 - 15

Example

```
char *desc = NULL;

int32_t error = L3CAM_OK;
error = CHANGE_RGB_CAMERA_BRIGHTNESS(devices[0], 10);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Change RGB brightness response %d - %s\n", error, desc);
}
```



Version:	1.5	 BEAM\ENGINE L3CAM User manual	Page:	75/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

CHANGE_RGB_CAMERA_CONTRAST

```
int CHANGE_RGB_CAMERA_CONTRAST(l3cam device, int contrast);
```

Description

Call this function to change the contrast of the RGB camera.

Parameters

device	Structure of an available device to execute the function.
contrast	Integer with the new contrast value. The range value is 0 – 30

Example

```
char *desc = NULL;

int32_t error = L3CAM_OK;
error = CHANGE_RGB_CAMERA_CONTRAST(devices[0], 5);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Change RGB contrast response %d - %s\n", error, desc);
}
```



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	76/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

CHANGE_RGB_CAMERA_SATURATION

```
int CHANGE_RGB_CAMERA_SATURATION(l3cam device, int saturation);
```

Description

Call this function to change the saturation of the RGB camera.

Parameters

device	Structure of an available device to execute the function.
saturation	Integer with the new saturation value. The range value is 0 – 60

Example

```
char *desc = NULL;

int32_t error = L3CAM_OK;
error = CHANGE_RGB_CAMERA_SATURATION(devices[0], 10);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Change RGB saturation response %d - %s\n", error, desc);
}
```



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	77/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

CHANGE_RGB_CAMERA_SHARPNESS

```
int CHANGE_RGB_CAMERA_SHARPNESS(l3cam device, int sharpness);
```

Description

Call this function to change the sharpness of the RGB camera.

Parameters

device	Structure of an available device to execute the function.
sharpness	Integer with the new sharpness value. The range value is 0 – 127

Example

```
char *desc = NULL;
int32_t error = L3CAM_OK;

error = CHANGE_RGB_CAMERA_SHARPNESS(devices[0], 100);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Change RGB sharpness response %d - %s\n", error, desc);
}
```



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	78/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

CHANGE_RGB_CAMERA_GAMMA

```
int CHANGE_RGB_CAMERA_GAMMA(l3cam device, int gamma);
```

Description

Call this function to change the gamma of the RGB camera.

Parameters

device	Structure of an available device to execute the function.
gamma	Integer with the new gamma value. The range value is 40 – 500

Example

```
char *desc = NULL;
int32_t error = L3CAM_OK;

error = CHANGE_RGB_CAMERA_GAMMA(devices[0], 150);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Change RGB gamma response %d - %s\n", error, desc);
}
```



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	79/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

CHANGE_RGB_CAMERA_GAIN

```
int CHANGE_RGB_CAMERA_GAIN(l3cam device, int gain);
```

Description

Call this function to change the gain of the RGB camera.

Parameters

device	Structure of an available device to execute the function.
gain	Integer with the new gain value. The range value is 0 – 63

Example

```
char *desc = NULL;

int32_t error = L3CAM_OK;
error = CHANGE_RGB_CAMERA_GAIN(devices[0], 20);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Change RGB gain response %d - %s\n", error, desc);
}
```



Version:	1.5		Page:	80/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

L3CAM User manual

CHANGE_RGB_CAMERA_WHITE_BALANCE

```
int CHANGE_RGB_CAMERA_WHITE_BALANCE(l3cam device, int white_balance);
```

Description

Call this function to change the white balance of the RGB camera.

Parameters

device	Structure of an available device to execute the function.
white_balance	Integer with the new white balance value. The range value is 1000 – 10000

Example

```
char *desc = NULL;

int32_t error = L3CAM_OK;
error = CHANGE_RGB_CAMERA_WHITE_BALANCE(devices[0], 3000);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Change RGB white balance response %d - %s\n", error, desc);
}
```



Version:	1.5	 BEAM\ENGINE L3CAM User manual	Page:	81/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

CHANGE_RGB_CAMERA_EXPOSURE_TIME

```
int CHANGE_RGB_CAMERA_EXPOSURE_TIME(l3cam device, int exposure_time);
```

Description

Call this function to change the exposure time of the RGB camera.

Parameters

device	Structure of an available device to execute the function.
exposure_time	Integer with the new exposure time value. The range value is 1 – 10000

Example

```
char *desc = NULL;

int32_t error = L3CAM_OK;
error = CHANGE_RGB_CAMERA_EXPOSURE_TIME(devices[0], 3000);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Change RGB exposure time response %d - %s\n", error, desc);
}
```



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	82/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

CHANGE_RGB_CAMERA_RESOLUTION

```
int CHANGE_RGB_CAMERA_RESOLUTION(l3cam device, econResolutions resolution);
```

Description

Call this function to change the resolution of the RGB image.

Parameters

device	Structure of an available device to execute the function.
resolution	Enum that indicates the desired resolution for the RGB image. The available resolutions are 640x480px; 1280x720px; 1920x1080px

Example

```
char *desc = NULL;

int32_t error = L3CAM_OK;
error = CHANGE_RGB_CAMERA_RESOLUTION(devices[0], reso_1280_720);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Change RGB image resolution response %d - %s\n", error, desc);
}
```



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	83/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

CHANGE_RGB_CAMERA_FRAMERATE

```
int CHANGE_RGB_CAMERA_FRAMERATE(l3cam device, int framerate);
```

Description

Call this function to change the framerate of the RGB camera.

Parameters

device	Structure of an available device to execute the function.
framerate	Integer with the new framerate value. The range value is 1 – 16 fps

Example

```
char *desc = NULL;

int32_t error = L3CAM_OK;
error = CHANGE_RGB_CAMERA_FRAMERATE(devices[0], 10);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Change RGB framerate response %d - %s\n", error, desc);
}
```



Version:	1.5		Page:	84/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

L3CAM User manual

ENABLE_RGB_CAMERA_AUTO_WHITE_BALANCE

```
int ENABLE_RGB_CAMERA_AUTO_WHITE_BALANCE (l3cam device, bool enabled);
```

Description

Call this function to enable or disable the auto white balance feature of the RGB camera.

Parameters

device	Structure of an available device to execute the function.
enabled	Boolean to enable/disable the auto white balance feature.

Example

```
char *desc = NULL;

int32_t error = L3CAM_OK;
error = ENABLE_RGB_CAMERA_AUTO_WHITE_BALANCE(devices[0], true);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Enable RGB camera auto white balance response %d - %s\n", error,
        desc);
}
```



Version:	1.5		Page:	85/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

L3CAM User manual

ENABLE_RGB_CAMERA_AUTO_EXPOSURE_TIME

```
int ENABLE_RGB_CAMERA_AUTO_EXPOSURE_TIME (l3cam device, bool enabled);
```

Description

Call this function to enable or disable the auto exposure time feature of the RGB camera.

Parameters

device	Structure of an available device to execute the function.
enabled	Boolean to enable/disable the auto exposure time feature.

Example

```
char *desc = NULL;

int32_t error = L3CAM_OK;
error = ENABLE_RGB_CAMERA_AUTO_EXPOSURE_TIME(devices[0], true);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Enable RGB camera auto exp.time response %d - %s\n", error, desc);
}
```



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	86/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

CHANGE_THERMAL_CAMERA_COLORMAP

```
int CHANGE_THERMAL_CAMERA_COLORMAP(l3cam device, thermalTypes colormap);
```

Description

Call this function to change the current colormap of the thermal image.

Parameters

device	Structure of an available device to execute the function.
colormap	Enum that indicates the current colormap for the thermal image.

Example

```
char *desc = NULL;

int32_t error = L3CAM_OK;
error = CHANGE_THERMAL_CAMERA_COLORMAP(devices[0], thermal_IRON);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Change Thermal colormap response %d - %s\n", error, desc);
}
```



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	87/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

CHANGE_THERMAL_CAMERA_TEMPERATURE_FILTER

```
int CHANGE_THERMAL_CAMERA_TEMPERATURE_FILTER(l3cam device,
                                              float min_temperature,
                                              float max_temperature);
```

Description

Call this function to change the thermal values for the filter of the thermal camera.

Parameters

device	Structure of an available device to execute the function.
min_temperature	float with the new minimum temperature value. The range value is -40 – 200 °C
max_temperature	float with the new maximum temperature value. The range value is -40 – 200 °C

Example

```
char *desc = NULL;

int32_t error = L3CAM_OK;
error = CHANGE_THERMAL_CAMERA_TEMPERATURE_FILTER(devices[0], 20.5, 35.5);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Change Thermal filter values response %d - %s\n", error, desc);
}
```



Version:	1.5		Page:	88/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

L3CAM User manual

ENABLE_THERMAL_CAMERA_TEMPERATURE_FILTER

```
int ENABLE_THERMAL_CAMERA_TEMPERATURE_FILTER (l3cam device, bool enabled);
```

Description

Call this function to enable or disable the temperature filter feature of the thermal camera.

Parameters

device	Structure of an available device to execute the function.
enabled	Boolean to enable/disable the filter feature.

Example

```
char *desc = NULL;

int32_t error = L3CAM_OK;
error = ENABLE_THERMAL_CAMERA_TEMPERATURE_FILTER(devices[0], true);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Enable thermal camera filter response %d - %s\n", error, desc);
}
```



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	89/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

CHANGE_ALLIED_CAMERA_BLACK_LEVEL

```
int CHANGE_ALLIED_CAMERA_BLACK_LEVEL (l3cam device, sensor sensor_id,
                                       float black_level);
```

Description

Call this function to change the black level of any of the allied cameras. This value only can be modified while the camera is not streaming.

Parameters

device	Structure of an available device to execute the function.
sensor_id	Structure that indicates if the parameter is modified in the 508 or in the 319 allied cameras.
black_level	Float with the new black level value. The range value is 0 – 4096

Example

```
char *desc = NULL;

int32_t error = L3CAM_OK;
error = CHANGE_ALLIED_CAMERA_BLACK_LEVEL(devices[0], av_sensors[2], 20.0);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Change Allied Black Level response %d - %s\n", error, desc);
}
```



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	90/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

CHANGE_ALLIED_CAMERA_EXPOSURE_TIME_US

```
int CHANGE_ALLIED_CAMERA_EXPOSURE_TIME_US (l3cam device, sensor sensor_id,
                                             float exposure_time);
```

Description

Call this function to change the exposure time of any of the allied cameras.

Parameters

device	Structure of an available device to execute the function.
sensor_id	Structure that indicates if the parameter is modified in the 508 or in the 319 allied cameras.
exposure_time	Float with the new exposure time value. The range value is 63.03 – 1e+07

Example

```
char *desc = NULL;

int32_t error = L3CAM_OK;
error = CHANGE_ALLIED_CAMERA_EXPOSURE_TIME_US(devices[0], av_sensors[2],
                                              10000.0);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Change Allied Exposure Time response %d - %s\n", error, desc);
}
```



Version:	1.5		Page:	91/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

L3CAM User manual

ENABLE_ALLIED_CAMERA_AUTO_EXPOSURE_TIME

```
int ENABLE_ALLIED_CAMERA_AUTO_EXPOSURE_TIME (l3cam device, sensor sensor_id,
                                              bool enable);
```

Description

Call this function to enable/disable the auto exposure time feature of any of the allied cameras.

Parameters

device	Structure of an available device to execute the function.
sensor_id	Structure that indicates if the parameter is modified in the 508 or in the 319 allied cameras.
enable	Boolean that enables/disables the auto exposure time feature. True to enable, false to disable.

Example

```
char *desc = NULL;

int32_t error = L3CAM_OK;
error = ENABLE_ALLIED_CAMERA_AUTO_EXPOSURE_TIME(devices[0], av_sensors[2],
                                              true);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Enable Allied Auto Exposure Time response %d - %s\n", error,
          desc);
}
```



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	92/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

CHANGE_ALLIED_CAMERA_AUTO_EXPOSURE_TIME_RANGE

```
int CHANGE_ALLIED_CAMERA_AUTO_EXPOSURE_TIME_RANGE(l3cam device,
                                                    sensor sensor_id,
                                                    float min, float max);
```

Description

Call this function to change the auto exposure time range of any of the allied cameras.

Parameters

device	Structure of an available device to execute the function.
sensor_id	Structure that indicates if the parameter is modified in the 508 or in the 319 allied cameras.
min	Float with the minimum exposure time value. The range value is 63.03 – 0.9e+06
max	Float with the maximum exposure time value. The range value is 87.596 – 1e+07

Example

```
char *desc = NULL;

int32_t error = L3CAM_OK;
error = CHANGE_ALLIED_CAMERA_AUTO_EXPOSURE_TIME_RANGE(devices[0],
                                                        av_sensors[2],
                                                        1000.0, 10000.0);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Change Allied Auto Exposure Time Range response %d - %s\n", error,
          desc);
}
```



Beamagine S.L.

info@beamagine.com

<https://beamagine.com/>



Sistema de
Gestión
ISO 9001:2015



www.tuv.com
ID 900002227

Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	93/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

CHANGE_ALLIED_CAMERA_GAIN

```
int CHANGE_ALLIED_CAMERA_GAIN (l3cam device, sensor sensor_id, float gain);
```

Description

Call this function to change the gain of any of the allied cameras.

Parameters

device	Structure of an available device to execute the function.
sensor_id	Structure that indicates if the parameter is modified in the 508 or in the 319 allied cameras.
gain	Float with the new gain time value. The range value is 0 – 48

Example

```
char *desc = NULL;

int32_t error = L3CAM_OK;
error = CHANGE_ALLIED_CAMERA_GAIN(devices[0], av_sensors[2], 10.0);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Change Allied Gain response %d - %s\n", error, desc);
}
```



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	94/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

ENABLE_ALLIED_CAMERA_AUTO_GAIN

```
int ENABLE_ALLIED_CAMERA_AUTO_GAIN(l3cam device, sensor sensor_id,
                                   bool enable);
```

Description

Call this function to enable/disable the auto gain feature of any of the allied cameras.

Parameters

device	Structure of an available device to execute the function.
sensor_id	Structure that indicates if the parameter is modified in the 508 or in the 319 allied cameras.
enable	Boolean that enables/disables the auto gain feature. True to enable, false to disable.

Example

```
char *desc = NULL;

int32_t error = L3CAM_OK;
error = ENABLE_ALLIED_CAMERA_AUTO_GAIN(devices[0], av_sensors[2], true);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Enable Allied Auto Gain response %d - %s\n", error, desc);
}
```



Version:	1.5		Page:	95/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

L3CAM User manual

CHANGE_ALLIED_CAMERA_AUTO_GAIN_RANGE

```
int CHANGE_ALLIED_CAMERA_AUTO_EXPOSURE_TIME_RANGE(l3cam device,
                                                    sensor sensor_id,
                                                    float min, float max);
```

Description

Call this function to change the auto gain range of any of the allied cameras.

Parameters

device	Structure of an available device to execute the function.
sensor_id	Structure that indicates if the parameter is modified in the 508 or in the 319 allied cameras.
min	Float with the minimum gain value. The range value is 0 – 48
max	Float with the maximum gain value. The range value is 0 – 48

Example

```
char *desc = NULL;

int32_t error = L3CAM_OK;
error = CHANGE_ALLIED_CAMERA_AUTO_GAIN_RANGE(devices[0], av_sensors[2],
                                              10.0, 40.0);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Change Allied Auto Gain Range response %d - %s\n", error, desc);
}
```



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	96/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

CHANGE_ALLIED_CAMERA_GAMMA

```
int CHANGE_ALLIED_CAMERA_GAMMA (l3cam device, sensor sensor_id, float gamma);
```

Description

Call this function to change the gamma of any of the allied cameras.

Parameters

device	Structure of an available device to execute the function.
sensor_id	Structure that indicates if the parameter is modified in the 508 or in the 319 allied cameras.
gamma	Float with the new gamma value. The range value is 0.4 – 2.4

Example

```
char *desc = NULL;

int32_t error = L3CAM_OK;
error = CHANGE_ALLIED_CAMERA_GAMMA(devices[0], av_sensors[2], 1.4);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Change Allied Gamma response %d - %s\n", error, desc);
}
```



Version:	1.5		Page:	97/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

L3CAM User manual

CHANGE_ALLIED_CAMERA_SATURATION

```
int CHANGE_ALLIED_CAMERA_SATURATION (l3cam device, sensor sensor_id,
                                     float saturation);
```

Description

Call this function to change the saturation of any of the allied cameras.

Parameters

device	Structure of an available device to execute the function.
sensor_id	Structure that indicates if the parameter is modified in the 508 or in the 319 allied cameras.
saturation	Float with the new saturation value. The range value is 0 – 1.0

Example

```
char *desc = NULL;

int32_t error = L3CAM_OK;
error = CHANGE_ALLIED_CAMERA_SATURATION(devices[0], av_sensors[2], 0.5);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Change Allied Saturation response %d - %s\n", error, desc);
}
```



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	98/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

CHANGE_ALLIED_CAMERA_SHARPNESS

```
int CHANGE_ALLIED_CAMERA_SHARPNESS (l3cam device, sensor sensor_id,
                                     int sharpness);
```

Description

Call this function to change the sharpness of any of the allied cameras. This value only can be modified while the camera is not streaming.

Parameters

device	Structure of an available device to execute the function.
sensor_id	Structure that indicates if the parameter is modified in the 508 or in the 319 allied cameras.
sharpness	Integer with the new sharpness value. The range value is -12 – 12

Example

```
char *desc = NULL;

int32_t error = L3CAM_OK;
error = CHANGE_ALLIED_CAMERA_SHARPNESS(devices[0], av_sensors[2], 10);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Change Allied Sharpness response %d - %s\n", error, desc);
}
```



Version:	1.5	 BEAM\ENGINE L3CAM User manual	Page:	99/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

CHANGE_ALLIED_CAMERA_HUE

```
int CHANGE_ALLIED_CAMERA_HUE (l3cam device, sensor sensor_id, float hue);
```

Description

Call this function to change the hue of any of the allied cameras.

Parameters

device	Structure of an available device to execute the function.
sensor_id	Structure that indicates if the parameter is modified in the 508 or in the 319 allied cameras.
hue	Float with the new hue value. The range value is -40 – 40

Example

```
char *desc = NULL;

int32_t error = L3CAM_OK;
error = CHANGE_ALLIED_CAMERA_HUE(devices[0], av_sensors[2], 20);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Change Allied HUE response %d - %s\n", error, desc);
}
```



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	100/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

CHANGE_ALLIED_CAMERA_INTENSITY_AUTO_PRECEDENCE

```
int CHANGE_ALLIED_CAMERA_INTENSITY_AUTO_PRECEDENCE (l3cam device,
                                                    sensor sensor_id,
                                                    int mode);
```

Description

Call this function to change the intensity auto precedence of any of the allied cameras. This value only can be modified while the camera is not streaming.

Parameters

device	Structure of an available device to execute the function.
sensor_id	Structure that indicates if the parameter is modified in the 508 or in the 319 allied cameras.
mode	Value for the intensity auto precedence mode, see APPENDIX 6 for the available values. The possible values are allied_auto_precedence_minimize_noise and allied_auto_precedence_minimize_blur.

Example

```
char *desc = NULL;

int32_t error = L3CAM_OK;
error = CHANGE_ALLIED_CAMERA_INTENSITY_AUTO_PRECEDENCE(devices[0],
                                                        av_sensors[2],
                                                        allied_auto_precedence_minimize_noise);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Change Allied Camera intensity auto precedence response %d -%s\n",
           error, desc);
}
```



Version:	1.5		Page:	101/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

L3CAM User manual

ENABLE_ALLIED_CAMERA_AUTO_WHITE_BALANCE

```
int ENABLE_ALLIED_CAMERA_AUTO_WHITE_BALANCE(l3cam device, sensor sensor_id,
                                             bool enable);
```

Description

Call this function to enable/disable the auto white balance feature of any of the allied cameras.

Parameters

device	Structure of an available device to execute the function.
sensor_id	Structure that indicates if the parameter is modified in the 508 or in the 319 allied cameras.
enable	Boolean that enables/disables the auto white balance feature. True to enable, false to disable.

Example

```
char *desc = NULL;

int32_t error = L3CAM_OK;
error = ENABLE_ALLIED_CAMERA_AUTO_WHITE_BALANCE(devices[0], av_sensors[2],
                                                true);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Enable Allied Auto White Balance response %d -%s\n", error, desc);
}
```



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	102/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

CHANGE_ALLIED_CAMERA_BALANCE_RATIO_SELECTOR

```
int CHANGE_ALLIED_CAMERA_BALANCE_RATIO_SELECTOR (l3cam device,
                                                  sensor sensor_id, int mode);
```

Description

Call this function to change the white balance ratio selector of any of the allied cameras.

Parameters

device	Structure of an available device to execute the function.
sensor_id	Structure that indicates if the parameter is modified in the 508 or in the 319 allied cameras.
mode	Value for the balance ratio selector mode, see APPENDIX 6 for the available values. The possible values are allied_balance_ratio_selector_red and allied_balance_ratio_selector_blue.

Example

```
char *desc = NULL;

int32_t error = L3CAM_OK;
error = CHANGE_ALLIED_CAMERA_BALANCE_RATIO_SELECTOR(devices[0], av_sensors[2],
                                                    allied_balance_ratio_selector_red);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Change Allied Camera balance ratio selector response %d -%s\n",
           error, desc);
}
```



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	103/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

CHANGE_ALLIED_CAMERA_BALANCE_RATIO

```
int CHANGE_ALLIED_CAMERA_BALANCE_RATIO (l3cam device, sensor sensor_id,
                                         float balance_ratio);
```

Description

Call this function to change the balance ratio of the colour specified in the balance ratio selector for the white balance algorithm of any of the allied cameras.

Parameters

device	Structure of an available device to execute the function.
sensor_id	Structure that indicates if the parameter is modified in the 508 or in the 319 allied cameras.
balance_ratio	Float with the new balance ratio value. The range value is 0 – 8

Example

```
char *desc = NULL;

int32_t error = L3CAM_OK;
error = CHANGE_ALLIED_CAMERA_BALANCE_RATIO(devices[0], av_sensors[2], 6.0);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Change Allied balance ratio response %d - %s\n", error, desc);
}
```



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	104/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

CHANGE_ALLIED_CAMERA_BALANCE_WHITE_AUTO_RATE

```
int CHANGE_ALLIED_CAMERA_BALANCE_WHITE_AUTO_RATE (l3cam device,
                                                    sensor sensor_id,
                                                    float balance_white_auto_rate);
```

Description

Call this function to change the rate at which the auto function changes the white balance of any of the allied cameras.

Parameters

device	Structure of an available device to execute the function.
sensor_id	Structure that indicates if the parameter is modified in the 508 or in the 319 allied cameras.
balance_white_auto_rate	Float with the new balance white auto ratio value. The range value is 1 – 100

Example

```
char *desc = NULL;

int32_t error = L3CAM_OK;
error = CHANGE_ALLIED_CAMERA_BALANCE_WHITE_AUTO_RATE(devices[0],
                                                    av_sensors[2], 80.0);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Change Allied Balance white auto rate response %d - %s\n",
           error, desc);
}
```



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	105/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

CHANGE_ALLIED_CAMERA_BALANCE_WHITE_AUTO_TOLERANCE

```
int CHANGE_ALLIED_CAMERA_BALANCE_WHITE_AUTO_TOLERANCE (l3cam device,
                                                         sensor sensor_id,
                                                         float balance_white_auto_tolerance);
```

Description

Call this function to change the tolerance from the ideal white balance value in which the auto white balance algorithm will not react in any of the allied cameras.

Parameters

device	Structure of an available device to execute the function.
sensor_id	Structure that indicates if the parameter is modified in the 508 or in the 319 allied cameras.
balance_white_auto_tolerance	Float with the new balance white auto ratio value. The range value is 1 – 50

Example

```
char *desc = NULL;

int32_t error = L3CAM_OK;
error = CHANGE_ALLIED_CAMERA_BALANCE_WHITE_AUTO_TOLERANCE(devices[0],
                                                           av_sensors[2],
                                                           10.0);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Change Allied Balance white auto tolerance response %d - %s\n",
           error, desc);
}
```



Version:	1.5		Page:	106/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

L3CAM User manual

CHANGE_ALLIED_CAMERA_AUTO_MODE_REGION

```
int CHANGE_ALLIED_CAMERA_AUTO_MODE_REGION (l3cam device, sensor sensor_id,
                                             int height, int width );
```

Description

Call this function to change the window used to measure values for auto functions/algorithms in any allied camera. This value only can be modified while the camera is not streaming and the values for height and width must be even.

Parameters

device	Structure of an available device to execute the function.
sensor_id	Structure that indicates if the parameter is modified in the 508 or in the 319 allied cameras.
height	Integer value for the height of the rectangle. The range for each camera is different. Allied 508c 0 – 1028 Allied 319c 0 – 1554
width	Integer value for the width of the rectangle. The range for each camera is different. Allied 508c 0 – 1232 Allied 319c 0 – 2064

Example

```
/*
In this example the wide 508 camera is av_sensors[2] and the narrow 319 camera
is in av_sensors[3]
*/
char *desc = NULL;
int32_t error = L3CAM_OK;

error = CHANGE_ALLIED_CAMERA_AUTO_MODE_REGION(devices[0], av_sensors[2], 1028,
                                              1232);
if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Change Allied wide Camera auto mode region response %d -%s\n",
           error, desc);
}

error = CHANGE_ALLIED_CAMERA_AUTO_MODE_REGION(devices[0], av_sensors[3], 1554,
                                              2064);
if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Change Allied narrow Camera auto mode region response %d -%s\n",
           error, desc);
}
```



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	107/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

CHANGE_ALLIED_CAMERA_INTENSITY_CONTROLLER_REGION

```
int CHANGE_ALLIED_CAMERA_INTENSITY_CONTROLLER_REGION (l3cam device,
                                                    sensor sensor_id,
                                                    int mode);
```

Description

Call this function to change between the full image or the subregion selected with CHANGE_ALLIED_CAMERA_AUTO_MODE_REGION function where the intensity controller operates in any of the allied cameras.

Parameters

device	Structure of an available device to execute the function.
sensor_id	Structure that indicates if the parameter is modified in the 508 or in the 319 allied cameras.
mode	Value for the intensity controller region selector mode, see APPENDIX 6 for the available values. The possible values are allied_controller_region_auto_mode_region and allied_controller_region_full_image.

Example

```
char *desc = NULL;

int32_t error = L3CAM_OK;
error = CHANGE_ALLIED_CAMERA_INTENSITY_CONTROLLER_REGION(devices[0],
                                                         av_sensors[2],
                                                         allied_controller_region_auto_mode_region);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Change Allied Camera intensity controller region response %d-%s\n",
           error, desc);
}
```



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	108/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

CHANGE_ALLIED_CAMERA_INTENSITY_CONTROLLER_TARGET

```
int CHANGE_ALLIED_CAMERA_INTENSITY_CONTROLLER_TARGET (l3cam device,
                                                    sensor sensor_id,
                                                    float intensity_controller_target);
```

Description

Call this function to change the target intensity value for auto intensity control in any of the allied cameras.

Parameters

device	Structure of an available device to execute the function.
sensor_id	Structure that indicates if the parameter is modified in the 508 or in the 319 allied cameras.
intensity_controller_target	Float with the new intensity target. The range value is 10 – 90

Example

```
char *desc = NULL;

int32_t error = L3CAM_OK;
error = CHANGE_ALLIED_CAMERA_INTENSITY_CONTROLLER_TARGET(devices[0],
                                                         av_sensors[2],
                                                         60.0);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Change Allied intensity controller target response %d - %s\n",
           error, desc);
}
```



Version:	1.5		Page:	109/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

L3CAM User manual

CHANGE_ALLIED_CAMERA_MAX_DRIVER_BUFFERS_COUNT

```
int CHANGE_ALLIED_CAMERA_MAX_DRIVER_BUFFERS_COUNT (l3cam device,
                                                    sensor sensor_id,
                                                    int max_driver_buffers_count);
```

Description

Call this function to change the maximum numbers of driver buffers used by the acquisition engine inside the Jetson TX2 for any of the allied cameras.

Parameters

device	Structure of an available device to execute the function.
sensor_id	Structure that indicates if the parameter is modified in the 508 or in the 319 allied cameras.
max_driver_buffers_count	Integer with the max driver buffers. The range value is 1 – 4096

Example

```
char *desc = NULL;

int32_t error = L3CAM_OK;
error = CHANGE_ALLIED_CAMERA_MAX_DRIVER_BUFFERS_COUNT(devices[0],
                                                    av_sensors[2], 65);

if(error != L3CAM_OK){
    desc = getBeamErrorDescription(error);
    printf("Change Allied Camera max driver buffers count response %d -%s\n",
           error, desc);
}
```



Version:	1.5		Page:	110/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

L3CAM User manual

APPENDIXES

APPENDIX 1 READING A POINT CLOUD

```

void udpReceiverController::readPointcloud(){

    int points_received = 1;
    socklen_t socket_len = sizeof(m_socket);
    char* buffer = NULL;
    buffer = (char*)malloc(64004);

    while(1)
    {
        int size_read = recvfrom(m_socket_descriptor, buffer, 64004, 0, (struct
        sockaddr*)&m_socket, &socket_len);
        if(size_read == 17){
            memcpy(&m_pointcloud_size, &buffer[1], 4);
            m_pointcloud_data = (int32_t*)malloc( sizeof(int32_t)*(((m_pointcloud_size) *5)
            + 1));
            memcpy(&m_pointcloud_data[0], &m_pointcloud_size, sizeof(int32_t));
            int32_t suma_1, suma_2;
            memcpy(&suma_1, &buffer[5], sizeof(int32_t));
            memcpy(&suma_2, &buffer[9], sizeof(int32_t));
            memcpy(&m_timestamp, &buffer[13], sizeof(uint32_t));
            m_is_reading_pointcloud = true;
            points_received = 1;
        }
        else if(size_read == 1){
            m_is_reading_pointcloud = false;
            int32_t *data_received = (int32_t*)malloc(sizeof(int32_t)*
            (m_pointcloud_size*5)+1);

            memcpy(&data_received[0], &m_pointcloud_data[0],sizeof(int32_t)*
            ((m_pointcloud_size*5)+1));

            emit pointcloudReadyToShow(data_received);
            free(m_pointcloud_data);
            points_received = 1;
        }
        else if(size_read > 0){
            if(m_is_reading_pointcloud){
                int32_t points = 0;
                memcpy(&points, &buffer[0], 4);
                memcpy(&m_pointcloud_data[points_received],&buffer[4],
                (sizeof(int32_t)*(points*5)));
                points_received+=points*5;
            }
        }
    }
    free(buffer);
}

```



Beamagine S.L.
info@beamagine.com
<https://beamagine.com/>



Sistema de
Gestión
ISO 9001:2015
www.tuv.com
ID 900002227



Version:	1.5	 BEAM\{ENGINE L3CAM User manual	Page:	111/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodríguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

APPENDIX 2 READING AN IMAGE

```

struct boxImage{
    int16_t x;
    int16_t y;
    int16_t height;
    int16_t width;
};

struct detectionImage{
    boxImage box;
    uint16_t confidence;
    uint16_t label;
};

void udpReceiverController::readRgbImage(){
    m_image_buffer = NULL;
    int bytes_count = 0;
    socklen_t socket_len = sizeof(m_socket);
    char* buffer;
    buffer = (char*)malloc(64000);
    detectionImage curr_det;

    while(1){
        int size_read = recvfrom(m_socket_descriptor, buffer, 64000, 0,
                                (struct sockaddr*)&m_socket, &socket_len);

        if(size_read == 11){

            memcpy(&m_image_height, &buffer[1], 2);
            memcpy(&m_image_width, &buffer[3], 2);
            memcpy(&m_image_channels, &buffer[5], 1);
            memcpy(&m_timestamp, &buffer[6], sizeof(uint32_t));
            memcpy(&m_image_detections, &buffer[10], 1);
            m_image_data_size = m_image_height*m_image_width*m_image_channels;
            m_image_buffer = (char*)malloc(m_image_data_size);
            m_is_reading_image = true;
            m_image_ready = false;
            m_detections.clear();
            bytes_count = 0;

        }else if(size_read == 1 || bytes_count == m_image_data_size ){

            m_is_reading_image = false;
            m_image_ready = true;
            bytes_count = 0;
            uint8_t* image_pointer = (uint8_t*)malloc(m_image_data_size);
            memcpy(image_pointer, m_image_buffer, m_image_data_size);

            emit imageRgbReadyToShow(image_pointer, m_image_height, m_image_width,
m_image_channels, m_detections);
            free(m_image_buffer);
            m_image_detections = 0;

```



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	112/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

```

    }else if(size_read != -1){
        if(m_image_detections > 0){
            //!read detections packages
            memcpy(&curr_det.confidence, &buffer[0], 2);
            memcpy(&curr_det.box.x, &buffer[2], 2);
            memcpy(&curr_det.box.y, &buffer[4], 2);
            memcpy(&curr_det.box.height, &buffer[6], 2);
            memcpy(&curr_det.box.width, &buffer[8], 2);
            memcpy(&curr_det.label, &buffer[10], 2);
            m_detections.push_back(curr_det);
            --m_image_detections;
            continue;
        }
        if(m_is_reading_image){
            memcpy(&m_image_buffer[bytes_count], buffer, size_read);
            bytes_count+=size_read;
        }
    }
}
free(buffer);
}

```



Version:	1.5		Page:	113/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

L3CAM User manual

APPENDIX 3 POLARIMETRIC PIXEL FORMAT

L3CAM supports one Lucid PHX050S1 polarized colour camera. These cameras have unprocessed BayerRG pixel formats. The data is transmitted by the camera following the GenICam standard's Pixel Format naming convention [RD 2]. L3CAM forwards the data using the same format.

The colour filter array of the PHX050S1 is as follows:

90°	45°	90°	45°
135°	0°	135°	0°
90°	45°	90°	45°
135°	0°	135°	0°

Figure 38. Colour filter array of Lucid PHX050S1.



Beamagine S.L.
info@beamagine.com
<https://beamagine.com/>



Sistema de
Gestión
ISO 9001:2015
www.tuv.com
ID 900002227



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	114/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

APPENDIX 4 RETURN CODES

Table 16. Library return codes.

RETURN CODE	DESCRIPTION
0	L3CAM_OK – The API call executed successfully
11	L3CAM_NO_SENSORS_AVAILABLE – The L3CAM device was not able to find any sensor attached to it.
12	L3CAM_INVALID_PARAMETERS – The L3CAM device has received invalid parameters for the new network configuration.
210	L3CAM_TIMEOUT_ERROR – The library timed out waiting for a response from L3CAM
211	L3CAM_ERROR_OUT_OF_MEMORY – The library has no available memory
222	L3CAM_UNDEFINED_SENSOR – The sensor input is erroneous
223	L3CAM_VALUE_OUT_OF_RANGE – The user input for a value is erroneous
224	L3CAM_SENSOR_NOT_AVAILABLE – The sensor input is erroneous
230	L3CAM_ERROR_CREATING_TCP_CLIENT_SOCKET – Unable to create a socket to connect with the L3CAM TCP server
231	L3CAM_ERROR_INITIALIZING_WSA - Windows library version only. Error initializing the WSA subsystem.
232	L3CAM_ERROR_CONNECTING_WITH_TCP_SERVER – The library failed to connect with the L3CAM TCP server
233	L3CAM_ERROR_SENDING_TCP_MESSAGE – Error while trying to send a message over TCP to L3CAM
234	L3CAM_ERROR_CREATING_TCP_SERVER_SOCKET – Error creating the Library TCP server
235	L3CAM_ERROR_BINDING_SOCKET – Error when binding library TCP socket, check local ports and system privileges.
236	L3CAM_ERROR_STARTING_TCP_SERVER – The library is unable to start the local TCP server.
237	L3CAM_ERROR_ACCEPTING_TCP_CLIENT – The local TCP server was unable to accept the L3CAM connection

Table 17. Econ RGB camera errors

ERROR CODE	DESCRIPTION
20	ERROR_OPENING_ECON_CAMERA – The L3CAM was unable to open the econ camera.
21	ERROR_SETTING_ECON_CAMERA_PARAMETER – The L3CAM failed when setting a parameter.
22	ERROR_SETTING_ECON_DEFAULT – The L3CAM failed when setting default values to econ rgb camera.



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	115/124
Author/s:	Eduardo Bernal, Pablo García, Ana Rodríguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

Table 18. Polarimetric camera errors.

ERROR CODE	DESCRIPTION
300	ERROR_POL_STD_EXCEPTION
301	ERROR_POL_RUNTIME_EXCEPTION
302	ERROR_POL_GENERIC_EXCEPTION
303	ERROR_POL_TIMEOUT_EXCEPTION
304	ERROR_POL_UNDEFINED_ERROR
305	ERROR_POL_PERCEPTION_EXCEPTION

Table 19. Thermal camera errors.

ERROR CODE	DESCRIPTION
400	ERROR_OPENING_THERMAL_CAMERA
401	ERROR_THERMAL_IMAGE_SIZE
402	ERROR_CLOSING_THERMAL_CAMERA
403	ERROR_SETTING_THERMAL_LUT
404	ERROR_GETTING_THERMAL_LUT
405	ERROR_SETTING_THERMAL_SHARPEN
406	ERROR_SETTING_THERMAL_SMOOTH
407	ERROR_GETTING_THERMAL_SYSTEM
408	ERROR_SETTING_THERMAL_SYSTEM

Table 20. Allied Cameras errors

ERROR CODE	DESCRIPTION
500	ERROR_ALLIED_PARAMETER_NOT_DEFINED
501	ERROR_ALLIED_BLACK_LEVEL_NOT_AVAILABLE
502	ERROR_ALLIED_CONFIGURING_BLACK_LEVEL
503	ERROR_ALLIED_CONFIGURING_EXPOSURE_TIME
504	ERROR_ALLIED_EXPOSURE_TIME_NOT_AVAILABLE
505	ERROR_ALLIED_CONFIGURING_AUTO_EXPOSURE_TIME
506	ERROR_ALLIED_AUTO_EXPOSURE_TIME_NOT_AVAILABLE
507	ERROR_ALLIED_CONFIGURING_AUTO_EXPOSURE_RANGE_MAX
508	ERROR_ALLIED_AUTO_EXPOSURE_MAX_NOT_AVAILABLE
509	ERROR_ALLIED_CONFIGURING_AUTO_EXPOSURE_RANGE_MIN
510	ERROR_ALLIED_AUTO_EXPOSURE_MIN_NOT_AVAILABLE
511	ERROR_ALLIED_CONFIGURING_GAIN
512	ERROR_ALLIED_GAIN_NOT_AVAILABLE
513	ERROR_ALLIED_CONFIGURING_AUTO_GAIN
514	ERROR_ALLIED_AUTO_GAIN_NOT_AVAILABLE
515	ERROR_ALLIED_CONFIGURING_AUTO_GAIN_RANGE_MAX
516	ERROR_ALLIED_AUTO_GAIN_MAX_NOT_AVAILABLE
517	ERROR_ALLIED_CONFIGURING_AUTO_GAIN_RANGE_MIN



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	116/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

ERROR CODE	DESCRIPTION
518	ERROR_ALLIED_AUTO_GAIN_MIN_NOT_AVAILABLE
519	ERROR_ALLIED_CONFIGURING_GAMMA
520	ERROR_ALLIED_GAMMA_NOT_AVAILABLE
521	ERROR_ALLIED_CONFIGURING SATURATION
522	ERROR_ALLIED_SATURATION_NOT_AVAILABLE
523	ERROR_ALLIED_CONFIGURING_SHARPNESS
524	ERROR_ALLIED_SHARPNESS_NOT_AVAILABLE
525	ERROR_ALLIED_CONFIGURING_HUE
526	ERROR_ALLIED_HUE_NOT_AVAILABLE
527	ERROR_ALLIED_CONFIGURING_INTENSITY_AUTO_PRECEDENCE
528	ERROR_ALLIED_INTENSITY_AUTO_PRECEDENCE_NOT_AVAILABLE
529	ERROR_ALLIED_CONFIGURING_BALANCE_RATIO_SELECTOR
530	ERROR_ALLIED_BALANCE_RATIO_SELECTOR_NOT_AVAILABLE
531	ERROR_ALLIED_CONFIGURING_BALANCE_RATIO
532	ERROR_ALLIED_BALANCE_RATIO_NOT_AVAILABLE
533	ERROR_ALLIED_CONFIGURUNG_AUTO_BALANCE_WHITE
534	ERROR_ALLIED_AUTO_BALANCE_WHITE_NOT_AVAILABLE
535	ERROR_ALLIED_CONFIGURING_BALANCE_WHITE_AUTO_RATE
536	ERROR_ALLIED_BALANCE_WHITE_AUTO_RATE_NOT_AVAILABLE
537	ERROR_ALLIED_CONFIGURING_WHITE_AUTO_TOLERANCE
538	ERROR_ALLIED_WHITE_AUTO_TOLERANCE_NOT_AVAILABLE
539	ERROR_ALLIED_CONFIGURING_AUTO_MODE_REGION_HEIGHT
540	ERROR_ALLIED_AUTO_MODE_REGION_HEIGHT_NOT_AVAILABLE
541	ERROR_ALLIED_CONFIGURING_AUTO_MODE_REGION_WIDTH
542	ERROR_ALLIED_AUTO_MODE_REGION_WIDTH_NOT_AVAILABLE
543	ERROR_ALLIED_CONFIGURING_INTENSITY_CONTROLLER_REGION
544	ERROR_ALLIED_INTENSITY_CONTROLLER_REGION_NOT_AVAILABLE
545	ERROR_ALLIED_CONFIGURING_INTENSITY_CONTROLLER_TARGET
546	ERROR_ALLIED_INTENSITY_CONTROLLER_TARGET_NOT_AVAILABLE
547	ERROR_ALLIED_CONFIGURING_MAX_DRIVER_BUFFERS_COUNT
548	ERROR_ALLIED_MAX_DRIVER_BUFFERS_COUNT_NOT_AVAILABLE



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	117/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

APPENDIX 5 STATUS

The L3CAM device returns the device status encoded in a 16-bit unsigned integer, each bit corresponds to a possible status. The bit 0 is the less significant bit of the integer.

Table 21. Status bits.

BIT	Description
0	BOOTING
1	ALARMS AT BOOTING
2	ERRORS AT BOOTING
3	BOOTING UNCONFIGURED
4	STARTED
5	STARTED WITH ALARMS
6	STARTED WITH ERRORS
7	STARTED UNCONFIGURED
8	STOPPING
9	STOPED
10	STOPED WITH ALARMS
11	UNUSED
12	UNUSED
13	UNUSED
14	UNUSED
15	UNUSED



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	118/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

APPENDIX 6 DATA STRUCTURES

Data structures defined in **beamagine.h** library file.

Enum sensorTypes

```
typedef enum sensorTypes {
    sensor_lidar = 1,
    sensor_econ_rgb,
    sensor_pol,
    sensor_thermal,
    sensor_allied_narrow,
    sensor_allied_wide
}sensorTypes;
```

This structure contains the possible sensors available in the L3CAM.

Table 22. sensorTypes enum fields.

Parameter	Description
Sensor_lidar	Identifier for LIDAR sensor
Sensor_econ_rgb	Identifier for RGB camera
Sensor_pol	Identifier for Polarimetric camera (Mono or RGB)
Sensor_thermal	Identifier for Thermal camera
Sensor_allied_narrow	Identifier for the allied camera 1800 U319c
Sensor_allied_wide	Identifier for the allied camera 1800 U508c

Enum pointCloudColor

```
enum pointCloudColor{
    RAINBOW = 0,
    RAINBOW_Z,
    INTENSITY,
    RGB_FUSION,
    POLARIMETRIC_FUSION,
    POL_PROCESSED_FUSION,
    THERMAL_FUSION,
    RGBT_FUSION,
    ALLIED_NARROW_FUSION = 12,
    ALLIED_WIDE_FUSION
};
```

This structure contains the possible colour values for the point cloud data.



Beamagine S.L.
info@beamagine.com
<https://beamagine.com/>



Version:	1.5	 L3CAM User manual	Page:	119/124
Author/s:	Eduardo Bernal, Pablo García, Ana Rodríguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

Table 23. *pointCloudColor* enum fields.

Parameter	Description
RAINBOW	Colour that represents the spherical distance of the point
RAINBOW_Z	Colour that represents the distance on the Z-axis of the point
INTENSITY	Colour that represents the intensity of the point
RGB_FUSION	Point cloud with the RGB camera information fused
POLARIMETRIC_FUSION	Point cloud with the Polarimetric camera information fused
POL_PROCESSED_FUSION	Point cloud with the Polarimetric camera processed information fused
THERMAL_FUSION	Point cloud with the Thermal camera information fused
RGBT_FUSION	Point cloud with the RGB-Thermal fusion camera information fused
ALLIED_NARROW_FUSION	Point cloud with the RGB Allied 1800 U 319c camera information fused
ALLIED_WIDE_FUSION	Point cloud with the RGB Allied 1800 U 508c camera information fused

Enum alliedCamerasIds

```
enum alliedCamerasIds {
    wide_camera = 0,
    narrow_camera
};
```

This structure is used to identify if the sensor element refers to the Allied narrow camera (1800 U319c) or the Allied wide camera (1800 U508c)

Allied configuration values

```
#define allied_auto_precedence_minimize_noise 0
#define allied_auto_precedence_minimize_blur 1

#define allied_balance_ratio_selector_red 0
#define allied_balance_ratio_selector_blue 1

#define allied_controller_region_auto_mode_region 0
#define allied_controller_region_full_image 4
```

The defines are used for specific parameters of the Allied cameras where an integer with specific value is needed.



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	120/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

Enum streamingProtocols

```
typedef enum streamingProtocols {
    protocol_raw_udp = 1,
    protocol_gstreamer,
    protocol_rtsp
}streamingProtocols;
```

This structure describes the available streaming protocols for each sensor.

Table 24. streamingProtocols enum fields.

Parameter	Description
protocol_raw_udp	Value to enable Raw UDP streaming mode
protocol_gstreamer	Value to enable the RTSP streaming mode using gstreamer pipelines
protocol_rtsp	Value to enable RTSP streaming using RTP/UDP

Struct sensor

```
typedef struct sensor{
    streamingProtocols protocol;
    sensorTypes sensor_type;
    uint8_t sensor_status;
    uint8_t image_type;
    bool perception_enabled;
}sensor;
```

This structure describes the parameters of each sensor in the L3CAM.

Table 25. sensor struct fields.

Parameter	Description
Protocol	Streaming protocol of the sensor
Sensor_type	Identify the sensor type
Sensor_status	Integer with the current sensor status
Image_type	Identify the current image type that the sensor is streaming
Perception_enabled	Boolean that shows if the perception algorithm is enabled in the sensor



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	121/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

Struct l3cam

```
typedef struct l3cam{
    char ip_address[16];
    char serial_number[10];
    uint8_t model;
}l3cam;
```

This structure describes the parameters of each L3CAM device available in the network.

Table 26. l3cam struct fields.

Parameter	Description
Ip_addres	The IP address of the device
Serial_number	The serial number of the device
Model	The model of the device

Enum econResolutions

```
typedef enum econResolutions{
    reso_640_480 = 1,
    reso_1280_720,
    reso_1920_1080
}econResolutions;
```

This structure describes the available resolutions for the econ RGB camera image streaming.

Table 27. econResolutions enum fields.

Parameter	Description
Reso_640_480	Use this value for a resolution of 640 x 480 px
Reso_1280_720	Use this value for a resolution of 1280 x 720 px (HD)
Reso_1920_1080	Use this value for a resolution of 1920 x 1080 px (FHD)



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	122/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

Enum thermalTypes

```
typedef enum thermalTypes{
    thermal_WHITE = 1,
    thermal_BLACK = 17,
    thermal_IRON = 20,
    thermal_COOL = 2,
    thermal_AMBER = 9,
    thermal_INDIGO = 10,
    thermal_TYRIAN = 16,
    thermal_GLORY = 8,
    thermal_ENVY = 16,
    thermal_WHITE_NEW = 100,
    thermal_BLACK_NEW,
    thermal_SPECTRA,
    thermal_PRISM,
    thermal_TYRIAN_NEW,
    thermal_AMBER_NEW,
    thermal_IRON_NEW,
    thermal_HI,
    thermal_HILO,
}thermalTypes;
```

This structure contains the colormap names for the thermal camera, this is a duplicate of the thermal library structures.



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	123/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

APPENDIX 7 L3CAM DIMENSIONS

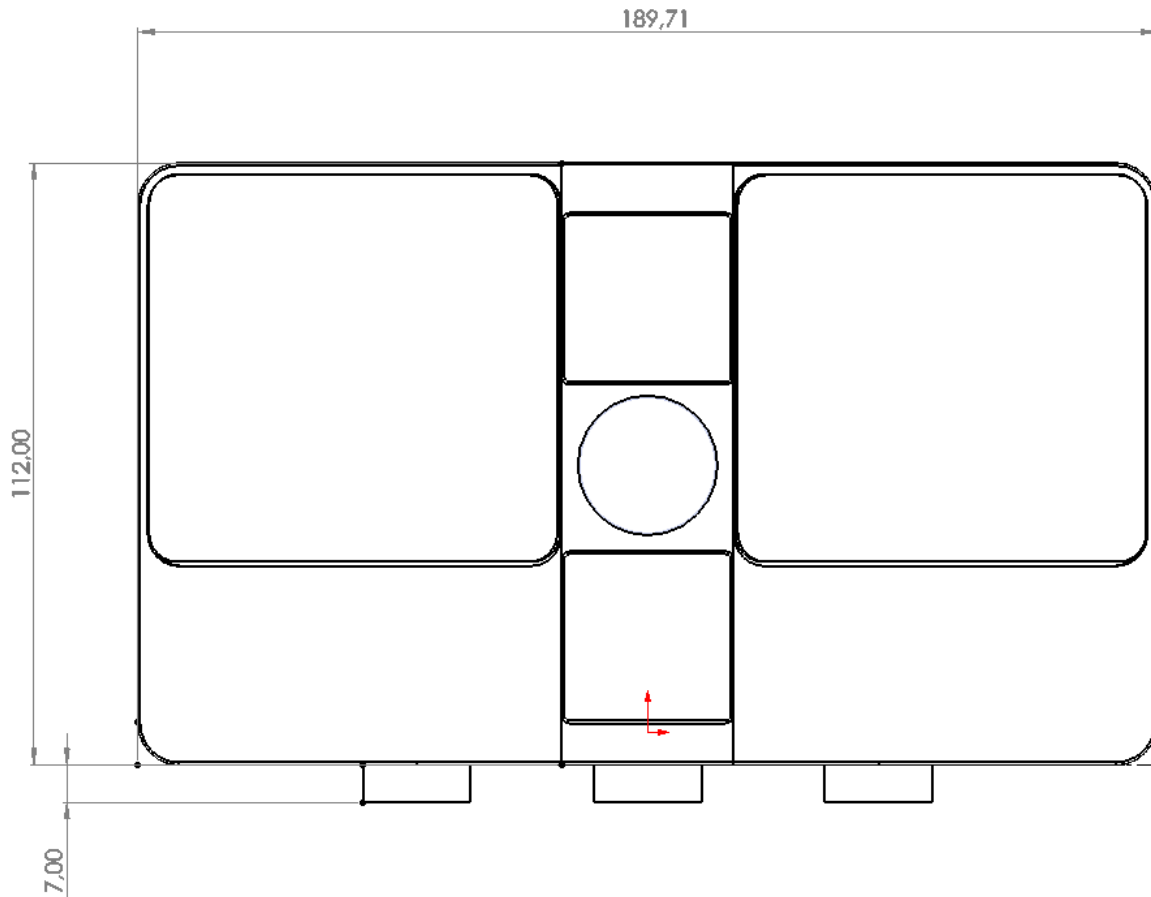


Figure 39. L3CAM front side dimensions.



Version:	1.5	 BEAM\GINE L3CAM User manual	Page:	124/124
Author/s:	Eduardo Bernal, Pablo Garcia, Ana Rodriguez, Isidro Bas		Approved by:	Jordi Riu
Revision date:	06/03/2023		Approval date:	06/03/2023

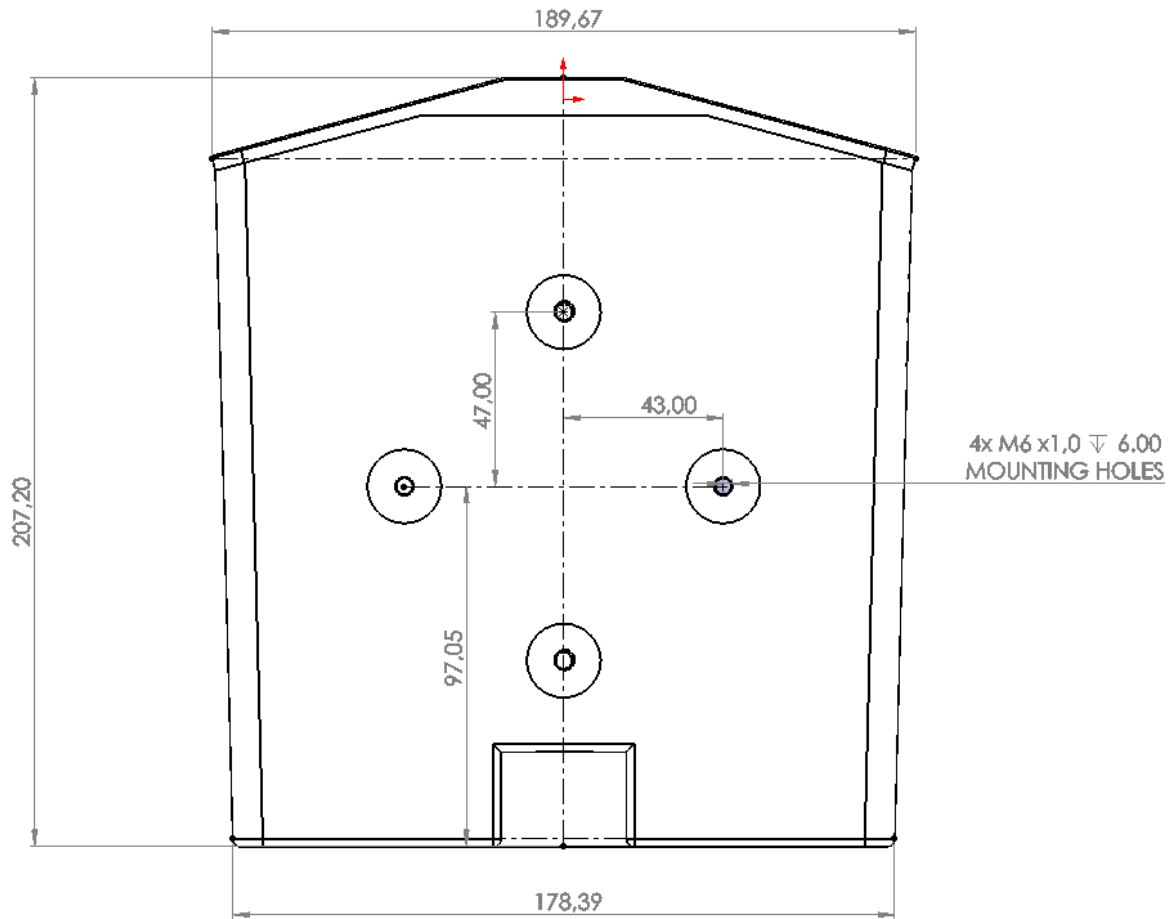


Figure 40, L3CAM mount holes dimensions.

